

# Impact Wrench

## 1-1/2" Square Drive

**Safety, Operation and Maintenance – Save This Document and Educate All Personnel**

Model	Retainer	Max. Torque	Working Torque Range
33330	Through Hole	3,000 ft. lbs.	1,600 – 2,500 ft. lbs.

### THREADED FASTENER



Find The Most Current Offering of Support Documents and Accessories at [www.Dynabrade.com](http://www.Dynabrade.com)

## ⚠ WARNING

Read and understand this tool manual before operating your air tool. Follow all safety rules for the protection of operating personnel as well as adjacent areas. Always operate, inspect and maintain this tool in accordance with the American National Standards Institute (ANSI). Safety Requirements for the Use, Care and Protection of Abrasive Wheels – ANSI B7.1, Compressed Air and Gas Institute (CAGI) Safety Code for Portable Air Tools – B186.1, Code of Federal Regulation – CFR 29 Part 1910, International Organization for Standardization (ISO) Hand Held Non-Electric Power Tools – ISO 11148, Safety Requirements and applicable State and Local Regulations.



Read and understand tool manual before work starts to reduce risk of injury to operator, visitors, and tool.



Eye protection must be worn at all times, eye protection to conform to ANSI Z87.1.



Ear protection to be worn when exposure to sound, exceeds the limits of applicable Federal, State or local statutes, ordinances and/or regulations.



Practice safety requirements. Work alert, have proper attire, and do not operate tools under the influence of alcohol or drugs.



Respiratory protection to be used when exposed to contaminants that exceed the applicable threshold limit values required by law.



Air line hazard, pressurized supply lines and flexible hoses can cause serious injury. Do not use damaged, frayed or deteriorated air hoses and fittings.

Some dust created by sanding, grinding, drilling, and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks and cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

### SAFETY and OPERATING INSTRUCTIONS



Carefully Read and Understand the General and Threaded Fastener sections found in Tool Safety and Operating Guidelines (PN00001676) Before Handling or Using Tool.

Carefully Read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool. Products offered by Dynabrade are not to be modified, converted or otherwise altered from the original design.

**Tool Intent:** Impact wrenches deliver a series of rotary blows to a fastener, producing torque. These tools have a 1-1/2" square anvil and are to ONLY be used with impact rated sockets. They can be used for fastening hard pull up and soft pull up joints.

**DO NOT USE Tool for Anything Other Than Its Intended Applications.**

**Training:** Proper care, maintenance, and storage of your air tool will maximize tools performance and reduce chance for accident.

**Employer's Responsibility:** Provide operators with safety instructions and training for safe use of tools and accessories.

**Report to Your Supervisor any Condition of the Tool, Accessories or Operation you Consider Unsafe.**

## MAINTENANCE INSTRUCTIONS

**Important:** To keep tool safe, a Preventative Maintenance Program is recommended. The program should include inspection of the tool and all related accessories and consumables, including air lines, pressure regulators, filters, oilers, etc. (refer to CAGI B186.1 for additional maintenance information). If accessory or tool breakage occurs, investigate failure to determine the cause and correct before issuing tool for work. Use the following schedule as a starting point in developing a Preventative Maintenance Program. If tool does not operate properly (RPM, vibration, start/stop) after these scheduled checks or at any time, the tool must be repaired and corrected before returning tool to use.

### INSTALLATION



- To ensure long life and dependable service, use a Closed Loop Air System and Filter-Regulator-Lubricator (FRL) as diagramed below.
- Each tool should have its own dedicated hose connected to an air supply FRL. Quick disconnects should be installed at the FRL in an effort to reduce contamination into the tool. Securely affix all fittings and hose assemblies.
- It is strongly recommended that all Dynabrade rotary vane air tools be used with a Filter-Regulator-Lubricator to minimize the possibility of misuse due to unclean air, wet air or insufficient lubrication. Dynabrade recommends the following: **10681** Air Line Filter-Regulator-Lubricator — Provides accurate air pressure regulation, two-stage filtration of water contaminants and micro-mist lubrication of pneumatic components.
- Dynabrade recommends 1 drop of air lube per minute for each 20 SCFM (example: if the tool specification states 40 SCFM, set the drip rate on the filter-lubricator to 2 drops per minute). **95842** Dynabrade Air Lube is recommended.

### MAINTENANCE SCHEDULE

Maintenance schedules depend on the type and style of tool. Refer to page 3 to reference symbols associated with specific maintenance items/areas. Match maintenance schedules accordingly. See page 4 for any additional maintenance information.

**Note:** Turbine style air motors do not require oil.

#### Daily (every 8 hours):

- Inspect tool and accessories for damage or broken parts. Replace items as necessary to ensure proper operation and safety.
-  Lubricate motor as recommended. Use **95842** Dynabrade Air Lube (10W/NR). Apply 1 drop/minute of air lube per 20 SCFM.
- Check air line pressure with a gage. (MAX. 90 PSIG or 6.2 Bar operating pressure at the air inlet of the tool.)
-  Lubricate wick system and right angle gears through gear case fitting. Apply 3 plunges of **95848** Gear Oil. Use **95541** Lubricant Gun (Prime lubricant gun before use).
- Check tool for proper operation: If operating improperly or demonstrates unusual vibration, the tool must be serviced and problem corrected before further use.

#### Every 20 Hours/Once a Week (which ever comes first):


- Measure RPM (speed) by setting air pressure to 90 PSIG (6.2 Bar) at tool inlet, without accessory mounted, while the tool is running. Using tachometer, check spindle speed of the tool. Unless otherwise stated the

no-load speed may not exceed the rated speed. If tool speed exceeds maximum rated RPM, service as required and correct before use.


- If tool is running too fast: look for worn, damaged or missing governor, air control rings and silencer(s). Service as required.
- If tool is running too slow: look for malfunctioning governor, clogged inlet screen, silencer(s) or air stream. Service as required.

**Note:** Special care must be taken when servicing governors. Refer to specific tool manual for governor instructions and/or speed control devices. Governor assemblies made from molded plastic components are non-serviceable and must be replaced.

#### Every 50 Hours:

-  Lubricate planetary gears through gear case fitting with 3 plunges of **95542** Grease. Use **95541** Lubricant Gun. (Prime lubricant gun before use).

### REPAIR

- Use only genuine Dynabrade replacement parts to ensure quality. To order replacement parts, specify Model#, Serial# and RPM of your air tool.
- Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons.
- A Motor Tune-Up Kit is available which includes high wear and medium wear motor parts.
- Air tool markings must be kept legible at all times, if not, reorder housing and replace. User is responsible for maintaining specification information.
-  After maintenance is performed on tool, add a few drops of **95842** Dynabrade Air Lube to the tool inlet and start the tool a few times to lubricate air motor. Verify RPM (per 20 hr maintenance schedule), vibration and operation.

### HANDLING & STORAGE

- Use of tool rests, hangers and/or balancers is recommended.
- Protect tool inlet from debris (see Notice below).
- Do Not** carry tool by air hose or near the tool throttle lever.
- Store accessories in protective racks or compartments to prevent damage.
- Follow the handling instructions outlined in the operating instructions when carrying the tool and when changing accessories.
- Protect accessories from exposure to water, solvents, high humidity, freezing temperature and extreme temperature changes.

### END OF USE/DISPOSAL

When tool has reached its end of useful service, disassemble tool into its primary components (i.e. steel, aluminum and plastic) and recycle or discard per local, state and/or federal regulations as to not harm the environment.


### NOTICE

All Dynabrade air motors use the highest quality parts available and are manufactured to exacting tolerances. Air motor failures are often traced to lack of lubrication or unclean air supply. Compressed air can force dirt and other contaminants into motor bearings causing early failure. Contaminants can score cylinder wall and vanes resulting in reduced efficiency and power. Our warranty obligation is contingent upon proper use of our tools. Air motors which have been subjected to misuse, contaminated air or lack of lubrication will void warranty.

## CLOSED LOOP AIR SYSTEM

### Sloped in Direction of Air Flow

- Dynabrade Air Power Tools are designed to operate at 90 PSIG (6.2 Bar) maximum air pressure at the tool inlet, when the tool is running. Use recommended regulator to control air pressure.
- Ideally the air supply should be free from moisture. To facilitate removing moisture from air supply, the installation of a refrigerated air dryer after the compressor and the use of drain valves at each tool station is recommended.

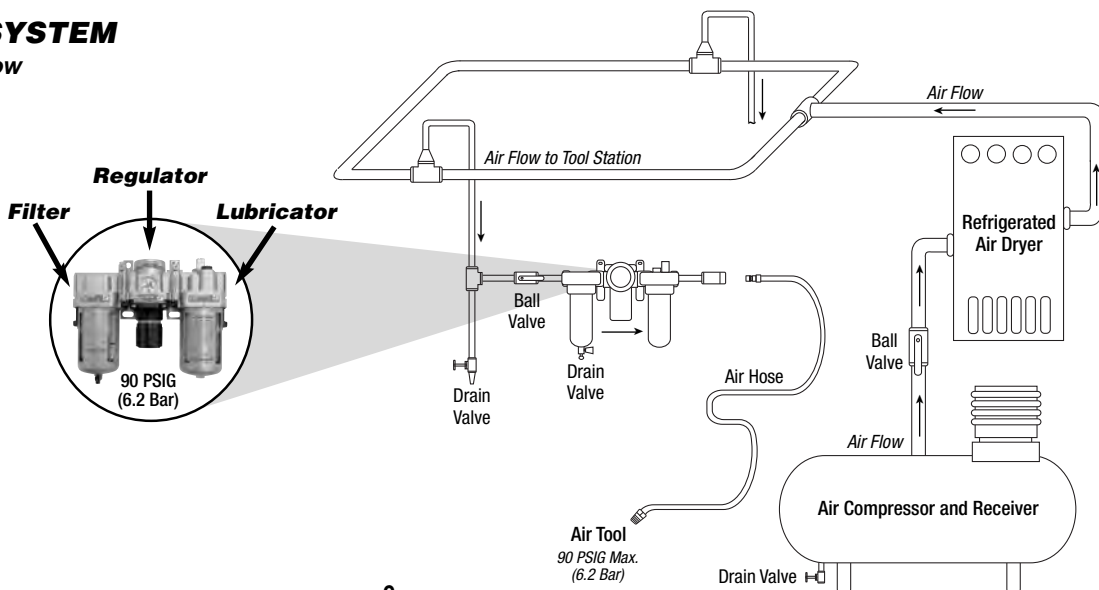


#### Lubricator Setting

1 Drop/Minute per 20 SCFM

**Model**  
**33330** 1-1/2" Drive

# Impact Wrench

## Complete Assembly

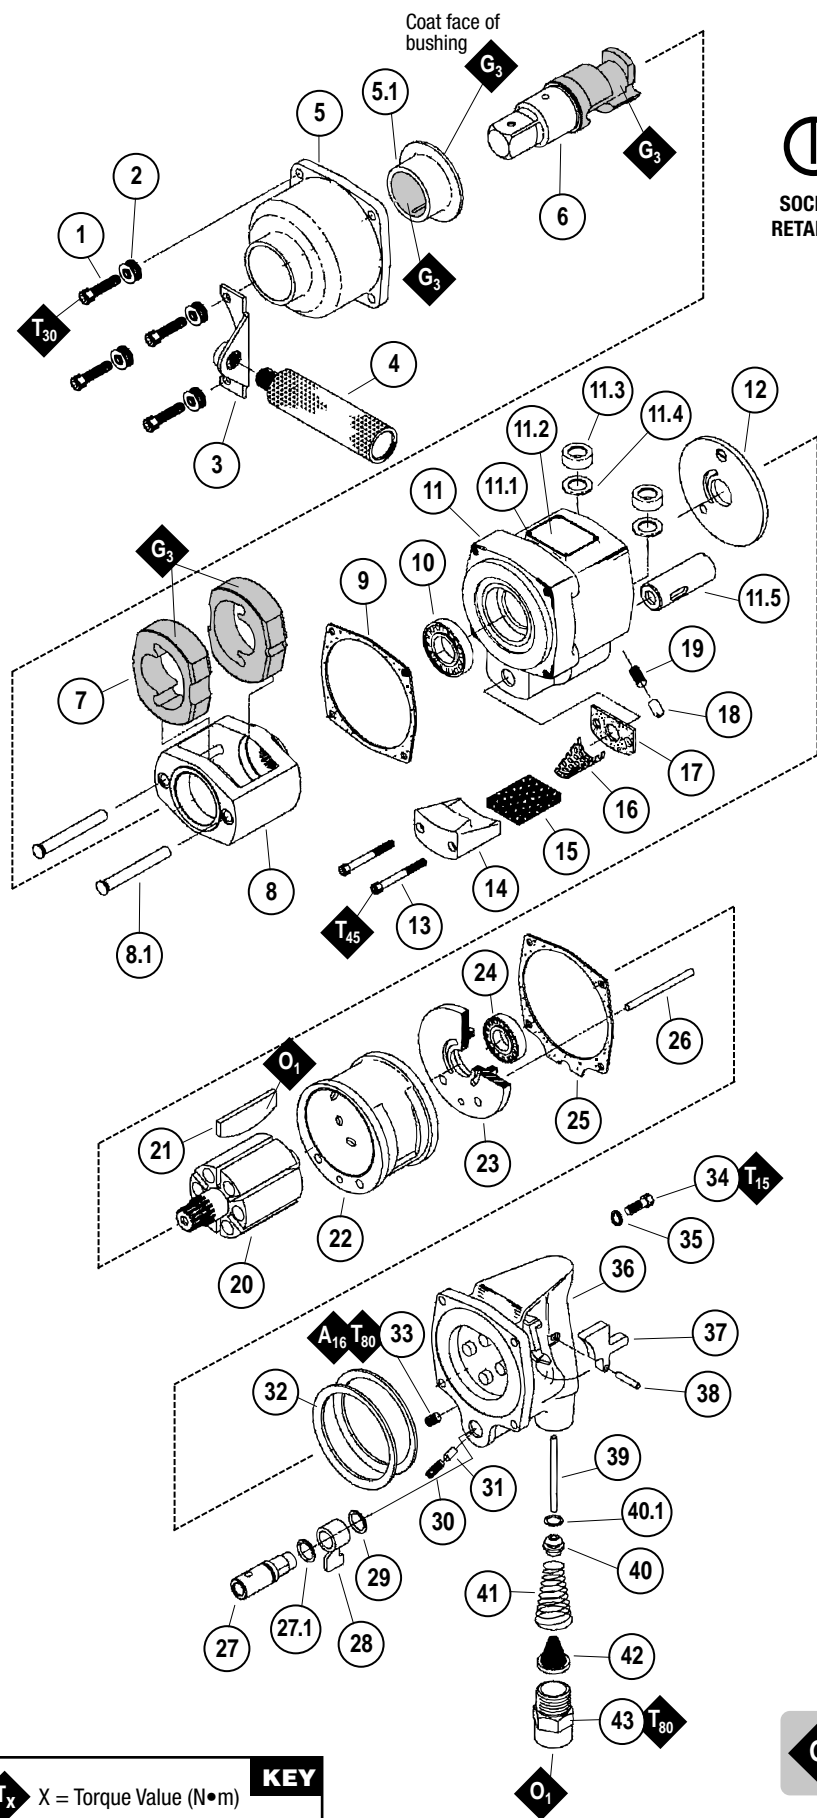

ITEM	P/N	DESCRIPTION	QTY.
1	96722	SCREW	4
2	96723	WASHER	4
3	33469	BRACKET	1
4	33410	HANDLE	1
5	33447	CASE	1
5.1	33448	BUSHING	1
6	33449	ANVIL	1
7	33451	HAMMER	2
8	33454	FRAME	1
8.1	33453	PIN	2
9	33455	GASKET	1
10	33456	RADIAL BALL BEARING	1
11	33452	HOUSING	1
11.1	96724	DRIVE SCREW	4
11.2	96740	NAME PLATE	1
11.3	33415	GASKET	2
11.4	33416	RETAINER	2
11.5	33429	BUSHING	1
12	33458	END PLATE	1
13	96725	SCREW	2
14	33431	DEFLECTOR	1
15	33432	SILENCER	1
16	33433	BAFFLE	1
17	33434	GASKET	1
18	33430	PLUNGER	1
19	96718	COMPRESSION SPRING	1
20	33359	ROTOR	1
21	33460	VANE SET (6/PKG)	1
22	33461	LINER	1
23	33462	END PLATE	1
24	33397	BEARING	1
25	33463	GASKET	1
26	33468	DOWEL	1
27	33440	VALVE	1
27.1	96712	SEAL	1
28	33441	LEVER	1
29	96729	SEAL	1
30	33466	SCREW	1
31	33438	FELT	1
32	33465	WASHER	2
33	96726	PLUG	1
34	96714	SCREW	4
35	96728	WASHER	4
36	33464	TRIGGER HOUSING	1
37	33439	TRIGGER	1
38	96720	PIN	1
39	33470	PLUNGER	1
40	33144	THROTTLE	1
40.1	33445	FACE	1
41	96721	CONICAL SPRING	1
42	33443	STRAINER	1
43	33442	INLET	1
—	97345	SOCKET RETAINER	1

**KEY**

**T<sub>x</sub>** X = Torque Value (N•m)

**T** Torque: N•m x 8.85 = lb•in.

**G** Thoroughly coat shaded parts with grease

**KEY**

**O** Oil: O<sub>1</sub> = Air Lube

**G** Grease: G<sub>3</sub> = Impact Clutch Grease

**A** Adhesive: A<sub>16</sub>= Loctite® #262

Always follow adhesive manufacturers cleaning and priming recommendations.

## LIFETIME WARRANTY

To validate Dynabrade Lifetime Warranty, you must register each tool at: [www.dynabrade.com](http://www.dynabrade.com). Registration of each tool at website is required. Dynabrade will not honor Lifetime Warranty on unregistered tools. Please view the entire Lifetime Warranty Policy at : [www.dynabrade.com](http://www.dynabrade.com).



## MACHINE SPECIFICATIONS

Model	Speed	Sound	Air Consumption	Drive	Weight	Length	Height
33330	3,750 RPM	99 db(A)	100+ SCFM (2,832+ LPM)	1-1/2"	36.6 lb. (16.6 kg)	16.5" (419.1 mm)	7.1" (180.3 mm)

Additional Specifications: Air Inlet Thread 1/2" NPT • Hose I.D. 3/4" (19 mm)

Sound Level is the pressure measurement according to the method outlined in ISO regulation ISO-15744

## ADDITIONAL SAFETY & OPERATING INSTRUCTIONS

- Always use retaining pin and ring with through hole style anvils.
- How the socket retainer improves safety – Worn or distorted sockets can be a safety hazard. The socket retainer indicates wear or damage before there's a catastrophic failure. When a socket is excessively worn or damaged or when an anvil is worn or damaged, the drive tool and socket don't rotate tightly together. That action bends and distorts the pin on the socket retainer. If that happens, you know to inspect and replace the socket or drive anvil.



**Straight Pin**




**Bent Pin**

## ADDITIONAL MAINTENANCE INSTRUCTIONS


- G** • Every 2-3 months. Disassemble & inspect impact mechanism for wear.
- Recoat indicated parts with Impact Clutch Grease.



## ORIENT VALVE POSITIONS

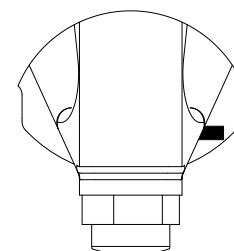


**Forward Rotation  
(Clockwise)**

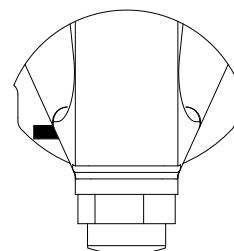

**Reverse Rotation  
(Counterclockwise)**

## OPTIONAL ACCESSORIES

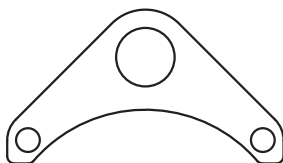

### Hanger Bracket

- Used to suspend tool to compensate the weight of the tool. Decrease operator fatigue.

**Part No. 33473**

### Impact Clutch Grease

- Synthetic moly-based extreme pressure lubricant.

**Part No. 94934 1 pt.**



### Dynabrade Air Lube

- Absorbs up to 10% of its weight in water.
- Prevents rust and formation of sludge.

**Part No. 95821 4 oz.**

**Part No. 95842 1 pt.**

## REFERENCE CONTACT INFORMATION

### American National Standards Institute (ANSI)

1899 L Street, NW, 11th Floor • Washington, DC 20036  
Tel: 1 (202) 293-8020

### Compressed Air & Gas Institute (CAGI)

1300 Sumner Ave. • Cleveland, OH 44115-2851  
Tel: 1 (216) 241-7333 • Fax: (216) 241-0105

### Government Printing Office (GPO)

Superintendent of Documents • Attn: New Orders  
P.O. Box 371954 • Pittsburgh, PA 15250-7954 • Tel: 1 (202) 512-1803

### International Organization of Standards (ISO)

Case postale 56 • CH-1211 Geneva 20  
Tel: + 41 22 749 01 11 • Fax: + 41 22 749 09 47

## DYNABRADE, INC.

8989 Sheridan Drive • Clarence, NY 14031-1419 • Phone: 716-631-0100 • Fax: 716-631-2073 • International Fax: 716-631-2524  
©DYNABRADE, INC., 2013 PRINTED IN USA PD13.41\_09/13

[www.dynabrade.com](http://www.dynabrade.com)

