

DynaPoint II

.7 hp, Rear Exhaust

PD16.01R
June, 2016
Supercedes PD16.01

Safety, Operation and Maintenance – Save This Document and Educate All Personnel

Model	Motor RPM	Spindle RPM	Cartridge Dia.
20110	20,000	15,500	3/4"

SANDER / POLISHER



Find The Most Current Offering of Support Documents and Accessories at www.Dynabrade.com

⚠ WARNING

Read and understand this tool manual before operating your air tool. Follow all safety rules for the protection of operating personnel as well as adjacent areas. Always operate, inspect and maintain this tool in accordance with the American National Standards Institute (ANSI). Safety Requirements for the Use, Care and Protection of Abrasive Wheels – ANSI B7.1, Compressed Air and Gas Institute (CAGI) Safety Code for Portable Air Tools – B186.1, Code of Federal Regulation – CFR 29 Part 1910, International Organization for Standardization (ISO) Hand Held Non-Electric Power Tools – ISO 11148, Safety Requirements and applicable State and Local Regulations.

 
- | | |
|---|---|
|
Read and understand tool manual before work starts to reduce risk of injury to operator, visitors, and tool. |
Eye protection must be worn at all times, eye protection to conform to ANSI Z87.1. |
|
Ear protection to be worn when exposure to sound, exceeds the limits of applicable Federal, State or local statutes, ordinances and/or regulations. |
Practice safety requirements. Work alert, have proper attire, and do not operate tools under the influence of alcohol or drugs. |
|
Respiratory protection to be used when exposed to contaminants that exceed the applicable threshold limit values required by law. |
Air line hazard, pressurized supply lines and flexible hoses can cause serious injury. Do not use damaged, frayed or deteriorated air hoses and fittings. |

Some dust created by sanding, grinding, drilling, and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks and cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

SAFETY and OPERATING INSTRUCTIONS



Carefully Read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool. Products offered by Dynabrade are not to be modified, converted or otherwise altered from the original design.

Tool Intent: DynaPoint II finishing machine is intended for blending and deburring operations using up to 3/4" diameter cartridge rolls. Maximum extension of 2-1/2" (63mm) for 3/4" dia. DynaRoll abrasives.

DO NOT USE Tool for Anything Other Than Its Intended Applications.

Training: Proper care, maintenance, and storage of your air tool will maximize tools performance and reduce chance for accident.

Employer's Responsibility: Provide operators with safety instructions and training for safe use of tools and accessories.

Report to Your Supervisor any Condition of the Tool, Accessories or Operation you Consider Unsafe.

MAINTENANCE INSTRUCTIONS

Important: To keep tool safe, a Preventative Maintenance Program is recommended. The program should include inspection of the tool and all related accessories and consumables, including air lines, pressure regulators, filters, oilers, etc. (refer to CAGI B186.1 for additional maintenance information). If accessory or tool breakage occurs, investigate failure to determine the cause and correct before issuing tool for work. Use the following schedule as a starting point in developing a Preventative Maintenance Program. If tool does not operate properly (RPM, vibration, start/stop) after these scheduled checks or at any time, the tool must be repaired and corrected before returning tool to use.

INSTALLATION

- To ensure long life and dependable service, use a Closed Loop Air System and Filter-Regulator-Lubricator (FRL) as diagramed below.
- Each tool should have its own dedicated hose connected to an air supply FRL. Quick disconnects should be installed at the FRL in an effort to reduce contamination into the tool. Securely affix all fittings and hose assemblies.
- It is strongly recommended that all Dynabrade rotary vane air tools be used with a Filter-Regulator-Lubricator to minimize the possibility of misuse due to unclean air, wet air or insufficient lubrication. Dynabrade recommends the following: **10681** Air Line Filter-Regulator-Lubricator — Provides accurate air pressure regulation, two-stage filtration of water contaminants and micro-mist lubrication of pneumatic components.
- Dynabrade recommends 1 drop of air lube per minute for each 20 SCFM (example: if the tool specification states 40 SCFM, set the drip rate on the filter-lubricator to 2 drops per minute). **95842** Dynabrade Air Lube is recommended.

MAINTENANCE SCHEDULE

Maintenance schedules depend on the type and style of tool. Refer to page 3 to reference symbols associated with specific maintenance items/areas. Match maintenance schedules accordingly. See page 4 for any additional maintenance information.

Note: Turbine style air motors do not require oil.

Daily (every 8 hours):

- Inspect tool and accessories for damage or broken parts. Replace items as necessary to ensure proper operation and safety.
 - ◆ Lubricate motor as recommended. Use **95842** Dynabrade Air Lube (10W/NR). Apply 1 drop/minute of air lube per 20 SCFM.
- Check air line pressure with a gage. (MAX. 90 PSIG or 6.2 Bar operating pressure at the air inlet of the tool.)
 - ◆ Lubricate wick system and right angle gears through gear case fitting. Apply 3 plunges of **95848** Gear Oil. Use **95541** Lubricant Gun (Prime lubricant gun before use).
- Check tool for proper operation: If operating improperly or demonstrates unusual vibration, the tool must be serviced and problem corrected before further use.

Every 20 Hours/Once a Week (which ever comes first):

- For tools without "wick system", lubricate right angle gears through lubricant fitting. Apply 1 plunge of **95542** Grease. Use **95541** Lubricant Gun. (Prime lubricant gun before use).
- Measure RPM (speed) by setting air pressure to 90 PSIG (6.2 Bar) at tool inlet, without accessory mounted, while the tool is running. Using

CLOSED LOOP AIR SYSTEM



Sloped in Direction of Air Flow

• Dynabrade Air Power Tools are designed to operate at 90 PSIG (6.2 Bar) maximum air pressure at the tool inlet, when the tool is running. Use recommended regulator to control air pressure.

• Ideally the air supply should be free from moisture. To facilitate removing moisture from air supply, the installation of a refrigerated air dryer after the compressor and the use of drain valves at each tool station is recommended.

Lubricator Setting

1 Drop/Minute per 20 SCFM

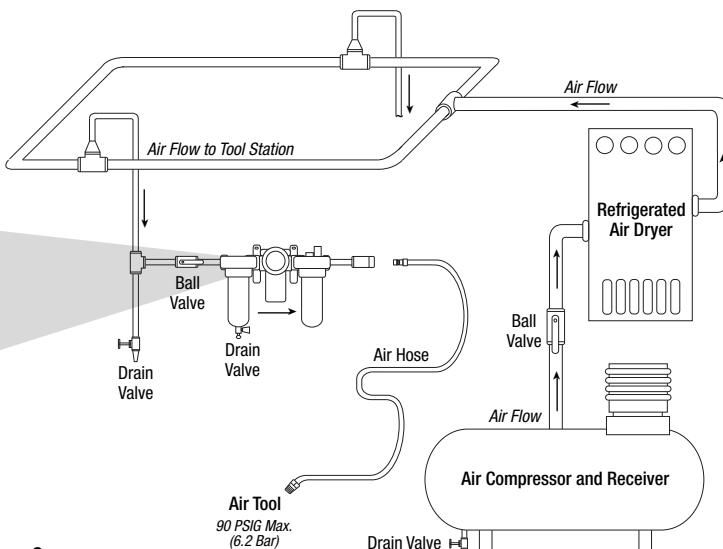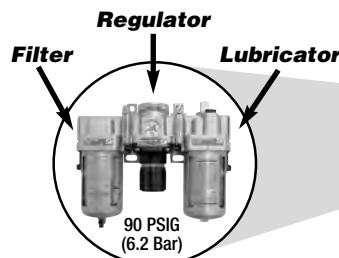

tachometer, check spindle speed of the tool. Unless otherwise stated the no-load speed may not exceed the rated speed. If tool speed exceeds maximum rated RPM, service as required and correct before use.

- If tool is running too fast: look for worn, damaged or missing governor, air control rings and silencer(s). Service as required.
- If tool is running too slow: look for malfunctioning governor, clogged inlet screen, silencer(s) or air stream. Service as required.

Note: Special care must be taken when servicing governors. Refer to specific tool manual for governor instructions and/or speed control devices. Governor assemblies made from molded plastic components are non-serviceable and must be replaced.

Every 50 Hours:

- ◆ Lubricate planetary gears through gear case fitting with 3 plunges of **95544** Grease. Use **95541** Lubricant Gun. (Prime lubricant gun before use).

REPAIR

- Use only genuine Dynabrade replacement parts to ensure quality. To order replacement parts, specify Model#, Serial# and RPM of your air tool.
- Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons.
- A Motor Tune-Up Kit is available which includes high wear and medium wear motor parts.
- Air tool markings must be kept legible at all times, if not, reorder housing and replace. User is responsible for maintaining specification information.

After maintenance is performed on tool, add a few drops of **95842** Dynabrade Air Lube to the tool inlet and start the tool a few times to lubricate air motor. Verify RPM (per 20 hr maintenance schedule), vibration and operation.

HANDLING & STORAGE


- Use of tool rests, hangers and/or balancers is recommended.
- Protect tool inlet from debris (see Notice below).
- **Do Not** carry tool by air hose or near the tool throttle lever.
- Store accessories in protective racks or compartments to prevent damage.
- Follow the handling instructions outlined in the operating instructions when carrying the tool and when changing accessories.
- Protect accessories from exposure to water, solvents, high humidity, freezing temperature and extreme temperature changes.

END OF USE/DISPOSAL

When tool has reached its end of useful service, disassemble tool into its primary components (i.e. steel, aluminum and plastic) and recycle or discard per local, state and/or federal regulations as to not harm the environment.

NOTICE

All Dynabrade air motors use the highest quality parts available and are manufactured to exacting tolerances. Air motor failures are often traced to lack of lubrication or unclean air supply. Compressed air can force dirt and other contaminants into motor bearings causing early failure. Contaminants can score cylinder wall and vanes resulting in reduced efficiency and power. Our warranty obligation is contingent upon proper use of our tools. Air motors which have been subjected to misuse, contaminated air or lack of lubrication will void warranty.

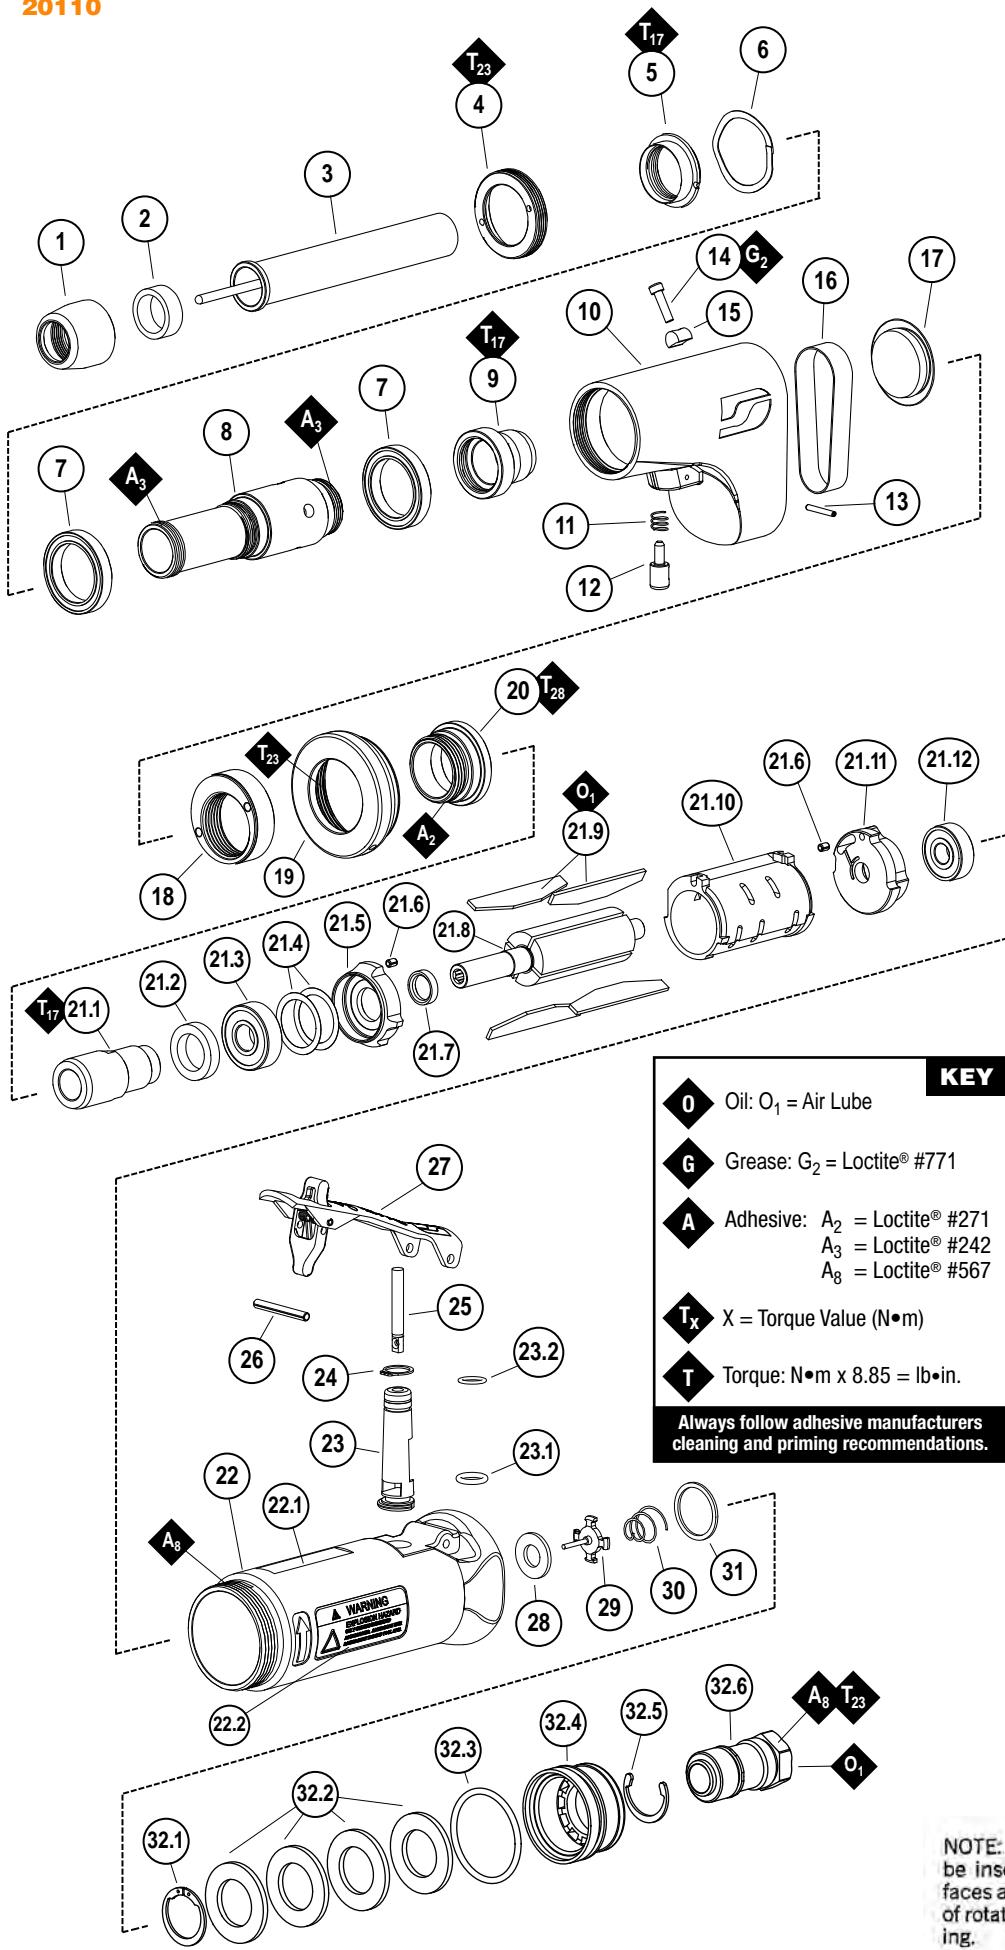

KEY	
◆	Oil: O ₁ = Air Lube
◆	Grease: G ₂ = Loctite® #771
◆	Adhesive: A ₂ = Loctite® #271 A ₃ = Loctite® #242 A ₈ = Loctite® #567
◆ T _x	X = Torque Value (N•m)
◆ T	Torque: N•m x 8.85 = lb•in.
Always follow adhesive manufacturers cleaning and priming recommendations.	

ITEM	P/N	DESCRIPTION	QTY.
1	20116	COLLET CAP	1
2	20021	CARTRIDGE COLLET	1
3	20129	3/4" ABRASIVE CARTRIDGE	1
4	20117	3/4" SPINDLE LOCK RING	1
5	20119	BEARING RETAINER	1
6	20138	SPRING	1
7	20137	BEARING	2
8	20120	SPINDLE	1
9	20121	PULLEY	1
10	20115	HOUSING	1
11	98285	SPRING	1
12	20124	SPINDLE LOCK PIN	1
13	95912	PIN	1
14	95311	SCREW	1
15	40029	MOTOR LOCK	1
16	20122	BELT	1
17	20016	PLUG	1
18	20126	ECCENTRIC	1
19	20125	LOCK RING	1
20	20127	INTERFACE	1
21	20133	AIR MOTOR ASSEMBLY	1
21.1	20134	DRIVE WHEEL	1
21.2	20135	DRIVE WHEEL FELT	1
21.3	01007	BEARING	1
21.4	01121	SHIM PACK (3/PKG)	1
21.5	01008	FRONT END PLATE	1
21.6	50767	PIN	2
21.7	01010	SPACER	1
21.8	55025	ROTOR	1
21.9	01185	VANE SET (4/PKG)	1
21.10	01028	CYLINDER	1
21.11	01721	REAR END PLATE	1
21.12	02649	BEARING	1
22	20128	HOUSING ASSEMBLY	1
22.1	96119	LABEL - LOGO	1
22.2	96191	LABEL - WARNING	1
23	01247	SPEED REGULATOR INCLUDES 95730 & 01024 O-RINGS	1
23.1	01024	O-RING	1
23.2	95730	O-RING	1
24	95558	RETAINING RING	1
25	01477	VALVE STEM	1
26	01017	PIN	1
27	01953	SAFETY THROTTLE-LEVER	1
28	01464	SEAL	1
29	01472	TIP VALVE	1
30	01468	SPRING	1
31	01564	AIR CONTROL RING	1
32	94535	MUFFLER ASSEMBLY	1
32.1	95711	RETAINING RING	1
32.2	01486	FELT SILENCER	4
32.3	96065	O-RING	1
32.4	01446	AIR DEFLECTOR	1
32.5	95620	RETAINING RING	1
32.6	01578	INLET ADAPTER	1

NOTE: The cartridge roll must be inserted so the roll edge faces away from the direction of rotation to prevent unraveling.



LIFETIME WARRANTY

To validate Dynabrade Lifetime Warranty, you must register each tool at: www.dynabrade.com. Registration of each tool at website is required. Dynabrade will not honor Lifetime Warranty on unregistered tools. Please view the entire Lifetime Warranty Policy at : www.dynabrade.com.



MACHINE SPECIFICATIONS

Model	Motor Speed	Spindle Speed	Power	Air Consumption	Cartridge Diameter	Weight	Length	Height
20110	20,000 RPM	15,500 RPM	.7 hp (522 W)	37 SCFM (1,048 LPM)	3/4"	3.5 lb. (1.6 kg)	12.3" (311 mm)	3.8" (96 mm)

Additional Specifications: Air Inlet Thread 1/4" NPT • Hose I.D. 3/8" (10 mm)

Visit dynabrade.com for your model's current vibration and sound data.

OPTIONAL ACCESSORIES



Motor Tune-Up Kit

- Includes assorted parts to help maintain and repair motor.

Part No. **98623**



Dunaswivel®

- Composite construction.
- Swivels 360° at two locations which allows an air hose to drop straight to the floor.

Part No. **94300** 1/4" NPT



Collet Cap

- Includes **96633** Set Screw.

Part No. **20100**



"Mega Flow" Plug

- Provides up to twice the air flow compared to standard plug design.
- Plug has "ported" design to prevent "starving" of the air tool.

Part No. **95675** Male



Dynabrade Air Lube

- For pneumatic equipment.
- Absorbs up to 10% of its weight in water.
- Prevents rust and formation of sludge.

Part No. **95821** 4 oz.

Part No. **95842** 1 pt.



Quick Lock Rubber Drum

Part No. **92950** 1/2"

Part No. **92951** 3/4"


Part No. **92952** 1"

OPTIONAL CARTRIDGE ROLL

1/2" Diameter Kit

- Includes Bushing, Collet and Abrasive Cartridge.

Part No. **20142**

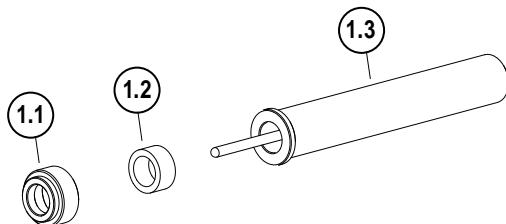

ITEM	P/N	DESCRIPTION	QTY.
1	20142	1/2" DIAMETER KIT	1
1.1	20141	1/2" REDUCING BUSHING	1
1.2	20023	1/2" CARTRIDGE COLLET	1
1.3	20140	1/2" ABRASIVE CARTRIDGE	1

PARTS PAGES/TECHNICAL DOCUMENTS

Visit Dynabrade.com to access: Assembly/Disassembly Instructions, Special Repair Tools, Tune-Up Kits, Accessories and Component Wear Percentages.

To access these documents and more, use the Quick Links section on the left side of Dynabrade.com and select Parts Pages. Search by any model number and the latest support documents will be available for your use.

Quick Links

- [View All Products](#)
- [Find Distributor](#)
- [Lifetime Warranty](#)
- [My Industry](#)
- [Product Support](#)
- [Parts Pages](#)
- [Literature](#)

Parts Pages

Find Dynabrade Parts Pages & Technical Documents

Please note that these pages change daily. If you download them, it's possible that the page you've downloaded, will be replaced by a newer version. Please refer to the table for the current pages.

Note: All documents below are in a PDF and require Acrobat Reader® to view.

Search By Model Number:

REFERENCE CONTACT INFORMATION

American National Standards Institute (ANSI)

25 West 43 Rd St., 14th Floor • New York, NY **10036**
Tel: 1 (202) 293-8020

Compressed Air & Gas Institute (CAGI)

1300 Summer Ave. • Cleveland, OH **44115-2851**
Tel: 1 (216) 241-7333 • Fax: (216) 241-0105

Government Printing Office (GPO)

Superintendent of Documents • Attn: New Orders
P.O. Box **371954** • Pittsburgh, PA **15250-7954** • Tel: 1 (202) 512-1803

International Organization of Standards (ISO)

Case postale 56 • CH-1211 Geneva 20
Tel: + 41 22 749 01 11 • Fax: + 41 22 749 09 47

DYNABRADE, INC.

8989 Sheridan Drive • Clarence, NY **14031-1419** • Phone: 716-631-0100 • Fax: 716-631-2073 • International Fax: 716-631-2524
© DYNABRADE, INC., 2016

www.dynabrade.com

