

For Serial No. 9J1264 and Higher

**Models:**

- 51201** — 3,200 RPM, 1/4" Collet
- 51202** — 5,000 RPM, 1/4" Collet
- 51204** — 3,200 RPM, 6 mm Collet
- 51205** — 5,000 RPM, 6 mm Collet

|          |                                                                          |            |
|----------|--------------------------------------------------------------------------|------------|
| <b>O</b> | Oil: O <sub>1</sub> = Air Lube                                           | <b>KEY</b> |
| <b>A</b> | Adhesive: A <sub>2</sub> = Loctite #271<br>A <sub>8</sub> = Loctite #567 |            |
| <b>T</b> | Torque: N•m x 8.85 = In. - lbs.                                          |            |
| <b>G</b> | Grease: G <sub>1</sub> = Lubriplate 630 AA                               |            |

Parts Page Reorder No. PD00•30R  
Effective October, 2000  
Supersedes PD00•30

# .4Hp/Straight-Line/Rear Exhaust Die Grinder

Air Motor and Machine Parts


## WARNING

Always operate, inspect and maintain this tool in accordance with the Safety Code for portable air tools (ANSI B186.1) and any other applicable safety codes and regulations. Please refer to Dynabrade's Warning/Safety Operating Instructions for more complete safety information. See inside for Important Operating, Maintenance and Safety Instructions.

### Index Key

No. Part # Description

|    |                          |                     |    |              |                        |
|----|--------------------------|---------------------|----|--------------|------------------------|
| 1  | <b>50010</b>             | 1/4" Collet Assy.   | 23 | <b>02679</b> | Shield                 |
|    | <b>50015</b>             | 6 mm Collet Assy.   | 24 | <b>01448</b> | Throttle Lever         |
| 2  | <b>50781</b>             | Rear Exhaust Cover  |    | <b>01462</b> | Safety Lock Lever      |
| 3  | <b>50782</b>             | Adapter             | 25 | <b>12132</b> | Pin                    |
| 4  | <b>54520</b>             | Bearing (2)         | 26 | <b>95558</b> | Retaining Ring         |
| 5  | <b>54472</b>             | Gear Shaft (2)      | 27 | <b>02124</b> | Housing - <b>51201</b> |
| 6  | <b>54519</b>             | 3,200 RPM Gear (2)  |    | <b>02125</b> | Housing - <b>51202</b> |
|    | <b>06213</b>             | 5,000 RPM Gear (2)  |    | <b>02126</b> | Housing - <b>51204</b> |
|    |                          |                     |    | <b>02127</b> | Housing - <b>51205</b> |
| 7  | <b>Planetary Carrier</b> |                     | 28 | <b>01449</b> | Valve Stem             |
|    | <b>50786</b>             | 3,200 RPM           | 29 | <b>95730</b> | O-Ring                 |
|    | <b>50787</b>             | 5,000 RPM           | 30 | <b>01024</b> | O-Ring                 |
| 8  | <b>54468</b>             | Ring Gear           | 31 | <b>01469</b> | Speed Regulator Assy.  |
| 9  | <b>01041</b>             | Grease Fitting      | 32 | <b>01464</b> | Seal                   |
| 10 | <b>53152</b>             | Gear Case           | 33 | <b>01472</b> | Tip Valve              |
| 11 | <b>50784</b>             | Lock Screw          | 34 | <b>01468</b> | Spring                 |
| 12 | <b>01547</b>             | Rubber Collar       | 35 | <b>01564</b> | Air Control Ring       |
| 13 | <b>02649</b>             | Bearing             | 36 | <b>94520</b> | Muffler Assy.          |
| 14 | <b>54529</b>             | Shim (3/pkg.)       | 37 | <b>95711</b> | Retaining Ring         |
| 15 | <b>01478</b>             | Front Bearing Plate | 38 | <b>95438</b> | O-Ring                 |
| 16 | <b>50767</b>             | Pin (2)             | 39 | <b>94521</b> | Muffler Base           |
| 17 | <b>01479</b>             | Rotor Spacer        | 40 | <b>94524</b> | Sintered Muffler       |
| 18 | <b>Rotor</b>             |                     | 41 | <b>94525</b> | Felt Muffler           |
|    | <b>54554</b>             | 3,200 RPM           | 42 | <b>94522</b> | Muffler Cap            |
|    | <b>54553</b>             | 5,000 RPM           | 43 | <b>95375</b> | O-Ring                 |
| 19 | <b>01480</b>             | Blades (4/pkg.)     | 44 | <b>94526</b> | Spacer                 |
| 20 | <b>01476</b>             | Cylinder            | 45 | <b>94523</b> | Inlet Adapter          |
| 21 | <b>02676</b>             | Rear Bearing Plate  |    |              |                        |
| 22 | <b>02696</b>             | Bearing             |    |              |                        |

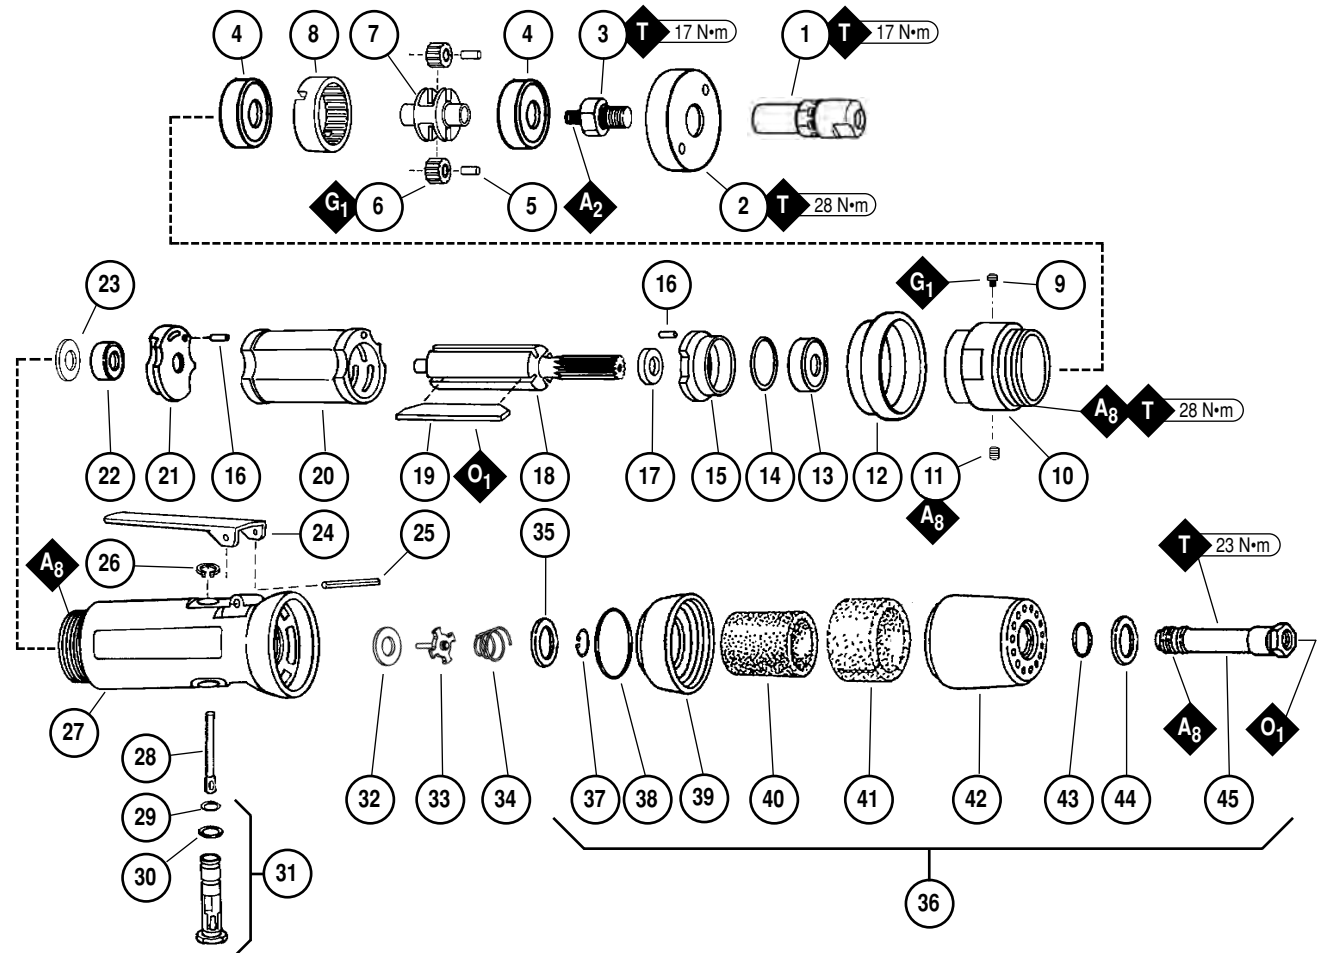

## Important Operating, Maintenance and Safety Instructions

Carefully read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool.

**Warning:** Hand, wrist and arm injury may result from repetitive work motion and overexposure to vibration.

**Important:** All Dynabrade Rotary Vane air tools must be used with a Filter-Regulator-Lubricator to maintain all warranties.

### Operating Instructions:

**Warning:** Eye, face, respiratory, sound and body protection must be worn while operating power tools. Failure to do so may result in serious injury or death. Follow safety procedures posted in workplace.

1. With power source disconnected from tool, securely fasten abrasive/accessory on tool.
2. Install air fitting into inlet bushing of tool. **Important:** Secure inlet bushing of tool with a wrench before attempting to install the air fitting to avoid damaging valve body housing.
3. Connect power source to tool. Be careful not to depress throttle lever in the process.
3. Check tool speed with tachometer. If tool is operating at a higher speed than the RPM marked on the tool or operating improperly, the tool should be serviced to correct the cause before use.

### Maintenance Instructions:

1. Check tool speed regularly with a tachometer. If tool is operating at a higher speed than the RPM marked on the tool, the tool should be serviced to correct the cause before use.
2. Some silencers on air tools may clog with use. Clean and replace as required.
3. All Dynabrade Rotary Vane air motors should be lubricated. Dynabrade recommends one drop of air lube per minute for each 10 SCFM (example: if the tool specifications state 40 SCFM, set the drip rate of your filter-lubricator at 4 drops per minute). Dynabrade Air Lube (P/N **95842**: 1 pt. 473 ml.) is recommended.
4. An Air Line Filter-Regulator-Lubricator must be used with this air tool to maintain all warranties. Dynabrade recommends the following: **11405** Air Line Filter-Regulator-Lubricator — Provides accurate air pressure regulation, two-stage filtration of water contaminants and micro-mist lubrication of pneumatic components. Operates 40 SCFM @ 90 PSIG has 3/8" NPT female ports.
5. Lubricate Planetary Gears through the Gear Casing Grease Fitting with **2-3 plunges for every 50 hours of use, to achieve maximum gear life (order 95542 Grease and 95541 Gun)**.
6. Use only genuine Dynabrade replacement parts. To reorder replacement parts, specify the **Model #, Serial # and RPM** of your machine.
7. A Motor Tune-Up Kit (P/N **96173**) is available which includes assorted parts to help maintain motor in peak operating condition. Please refer to Dynabrade's Preventative Maintenance Schedule (PD00•32) for a guide to expectant life of component parts.
8. Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons.

### Safety Instructions:

Products offered by Dynabrade should not be converted or otherwise altered from original design without expressed written consent from Dynabrade, Inc.



- **Important:** User of tool is responsible for following accepted safety codes such as those published by the American National Standards Institute (ANSI).
- Operate machine for one minute before application to workpiece to determine if machine is working properly and safely before work begins.
- Always disconnect power supply before changing abrasive/accessory or making machine adjustments.
- Inspect abrasives/accessories for damage or defects prior to installation on tools.
- Please refer to Dynabrade's Warning/Safety Operating Instructions Tag (Reorder No. **95903**) for more complete safety information.
- **Warning:** Hand, wrist and arm injury may result from repetitive work, motion and overexposure to vibration.

### Notice

All Dynabrade motors use the highest quality parts and metals available and are machined to exacting tolerances. The failure of quality pneumatic motors can most often be traced to an unclean air supply or the lack of lubrication. Air pressure easily forces dirt or water contained in the air supply into motor bearings causing early failure. It often scores the cylinder walls and the rotor blades resulting in limited efficiency and power. Our warranty obligation is contingent upon proper use of our tools and cannot apply to equipment which has been subjected to misuse such as unclean air, wet air or a lack of lubrication during the use of this tool.

### One Year Warranty

Following the reasonable assumption that any inherent defect which might prevail in a product will become apparent to the user within one year from the date of purchase, all equipment of our manufacture is warranted against defects in workmanship and materials under normal use and service. We shall repair or replace at our factory, any equipment or part thereof which shall, within one year after delivery to the original purchaser, indicate upon our examination to have been defective. Our obligation is contingent upon proper use of Dynabrade tools in accordance with factory recommendations, instructions and safety practices. It shall not apply to equipment which has been subject to misuse, negligence, accident or tampering in any way so as to affect its normal performance. Normally wearable parts such as bearings, contact wheels, rotor blades, etc., are not covered under this warranty.

| Model Number | Motor HP (W) | Motor RPM | Sound Level | Maximum Air Flow CFM/SCFM (LPM) | Air Pressure PSIG (Bars) | Spindle Thread | Weight Pound (kg) | Length Inch (mm) | Height Inch (mm) |
|--------------|--------------|-----------|-------------|---------------------------------|--------------------------|----------------|-------------------|------------------|------------------|
| 51201/51204  | .4 (298)     | 3,200     | 81 dB(A)    | 3/23 (651)                      | 90 (6.2)                 | 3/8"-24 male   | 1.8 (.8)          | 9-1/8 (232)      | 1-5/8 (40)       |
| 51202/51205  | .4 (298)     | 5,000     | 84 dB(A)    | 3/23 (651)                      | 90 (6.2)                 | 3/8"-24 male   | 1.8 (.8)          | 9-1/8 (232)      | 1-5/8 (40)       |

Additional Specifications: Air Inlet Thread 1/4" NPT • Hose Size 1/4" (8 mm)

## **Disassembly/Assembly Instructions - .4 Hp/Straight-Line/Rear Exhaust**

**Important:** Manufacturer's warranty is void if tool is disassembled before warranty expires.

**Notice:** Dynabrade strongly recommends the use of their 52296 Repair Collar (sold separately) during assembly/disassembly activities. Failure to use this collar will highly increase the risk of damage to the valve body of this tool. Please refer to parts breakdown for part identification.

### **Motor Disassembly:**

1. Disconnect tool from power source.
2. Secure air tool in vise using 52296 Repair Collar. Remove collet assembly.
3. With an adjustable pin wrench or 50971 Lock Ring Tool, remove 50781 Rear Exhaust Cover by turning counter-clockwise.
4. Remove 50784 Lock Screw and pull 50782 Adapter and planetary carrier assembly from 53152 Gear Case.
5. Press planetary carrier assembly from rear 54520 Bearing. Remove ring gear and gears from 50786 or 50787 Planetary Carrier.
6. Secure planetary carrier in vise and remove 50782 Adapter. Press carrier from front 54520 Bearing.
7. Grab onto pinion and pull motor assembly from motor housing.
8. Press 54553 or 54554 Rotor from 02696 Rear Bearing. Press 02696 Rear Bearing from rear bearing plate, remove 02679 Shield.
9. Remove cylinder and rotor blades from rotor.
10. Press rotor through 02649 Front Bearing and 01478 Front Bearing Plate.

**Motor Disassembly Complete.**

### **Valve Body Disassembly:**

1. Position valve body in vise using 52296 Repair Collar with air inlet facing up.
2. Remove air fitting by securing 94523 Inlet Adapter with a wrench and twist air fitting from inlet adapter.  
**Important:** 94523 Inlet Adapter must be secured before attempting to remove air fitting to avoid damaging valve body housing.
3. Remove 94523 Inlet Adapter.
4. Remove 95711 Retaining Ring from inlet adapter and separate 94521 Muffler Base from 94522 Muffler Cap. Remove sintered muffler and felt muffler.
5. Remove 01564 Air Control Ring from valve body. Using needle nose pliers, remove 01468 Spring, 01472 Tip Valve and 01464 Seal.
6. Using a 2.5 mm drift pin, tap 12132 Pin from housing and remove throttle lever.
7. Remove 95558 Retaining Ring. Push 01469 Regulator from valve body and remove O-Rings.

**Disassembly Complete.**

### **Motor Assembly:**

**Important:** Be sure parts are clean and in good repair before assembling. Follow all grease, oil, and torque specifications.

1. Slip 01479 Spacer onto 54553 or 54554 Rotor.
2. Place a .002" Shim into 01478 Front Bearing plate as an initial spacing. Then slip 02649 Bearing into 01478 Front Bearing Plate. Press assembly onto rotor.
3. Check the clearance between rotor and bearing plate by using a .001" feeler gauge. Clearance should be at .001" to .0015". Adjust clearance by repeating steps 1-3 changing shims as required.
4. Once proper rotor gap clearance is achieved, install lubricated blades into rotor slots, (use 95842 Dynabrade Air Motor Oil or equivalent).
5. Install 01476 Cylinder so it rests against the 01478 Front Bearing Plate, (make sure inlet holes of cylinder line up with inlet holes in 02676 Rear Bearing Plate).
6. Press 02696 Bearing into 02676 Rear Bearing Plate. Press this assembly onto rotor. **Important:** Fit must be snug between bearing plates and cylinder. If too tight, rotor will not turn freely. Rotor must then be lightly tapped at press end so it will turn freely while still maintaining a snug fit. A loose fit will not achieve the proper preload or motor bearings. Next, place a small amount of grease on the 02696 Bearing and stick 02679 Shield against the bearing.
7. Secure housing in vise using 52296 Repair Collar or padded jaws so that motor cavity points upward.
8. Install motor assembly into housing, making sure motor drops all the way into housing.  
**Note:** Align the rear bearing plate node with the notch inside the housing.
9. Slip 01547 Insulator Collar over 53152 Gear Case.
10. Apply Loctite® #567 to threads, and screw 53152 Gear Case onto motor housing. Torque to 28 N-m/250 in. lbs.
11. Press front 54520 Bearing onto front end of 50786 or 50787 Planetary Carrier.
12. Hold planetary carrier in a soft jaw vise and apply one drop of #271 Loctite® to the threads of 50782 Adapter. Install adapter onto planetary carrier. Torque to 17 N-m/150 in. lbs.
13. Install planetary gears and 54472 Gear Shafts onto planetary housing.
14. Slip 54468 Ring Gear over gears making sure that notches in ring gear will align with lock screw and grease fitting in 53152 Gear Case once planetary gear assembly is installed.
15. Press rear 54520 Bearing onto 50786 or 50787 Planetary Carrier, until the outer race of the bearing touches the ring gear.
16. Slip the complete planetary gear assembly into 53152 Gear Case and install 50784 Lock Screw.
17. Install 50781 Rear Exhaust Cover onto 53152 Gear Case. Torque to 28 N-m/250 in. lbs.
18. Lubricate planetary gears through 53152 Gear Case Grease Fitting with two plunges every 50 hours of use for maximum gear life.
19. Install collet assembly.

**Motor Assembly Complete.**

(continued on next page)

## Disassembly/Assembly Instructions (continued)

### Valve Body Assembly:

1. Insert **01469** Regulator with o-rings and valve stem in place into valve body. Secure with **95558** Retaining Ring.
2. Secure valve body in vise using **52296** Repair Collar with air inlet facing upwards. Insert **01464** Seal.
3. Line up hole in valve stem with hole in housing (looking past brass bushing). Insert **01472** Tip Valve so that the metal pin passes through the hole in the valve stem. Install **01468** Spring (small end towards tip valve).
4. Assemble sintered muffler and felt muffler together and place in **94522** Muffler Cap. Install **94521** Muffler Base onto muffler cap.
5. Install **95438** O-Ring into groove on muffler base. Place **95375** O-Ring and **94526** Spacer into recessed area of muffler cap.
6. Slip **94523** Inlet Adapter through muffler assembly and install **95711** Retainer Ring into groove on inlet adapter.
7. Install **01564** Air Control Ring into valve body housing.
8. Apply Loctite® #567 PST Pipe Sealant to threads of **94523** Inlet Adapter and install entire muffler assembly onto valve body. Torque 23.0 N•m/200 in. - lbs.
9. Replace air fitting. Secure inlet adapter with a wrench before tightening air fitting.
10. Install throttle lever and **12132** Pin.

**Tool Assembly Complete. Please allow 30 minutes for adhesives to cure before operating tool.**

**Important:** Motor should now be tested for proper operation at 90 PSIG. If motor does not operate properly or operates at a higher RPM than marked on the tool, the tool should be serviced to correct the cause before use. Before operating, place 2-3 drops of Dynabrade Air Lube (P/N **95842**) directly into air inlet with throttle lever depressed. Operate tool for 30 seconds to determine if tool is operating properly and to allow lubricating oils to properly penetrate motor. Loctite® is a registered trademark of Loctite Corp.

## Optional Accessories



### Dynaswivel®

- Swivels 360° AT TWO PIVOT POINTS allowing the air hose to drop directly to the floor while providing superb tool handling.
- New **94300** 1/4" NPT, non-marring composite construction.



### 96173 Motor Tune-Up Kit


- Includes assorted parts to help maintain and repair motor.



### Grease

- Multi-purpose grease for all types of bearings, cams, gears.
- High film strength; excellent resistance to water, steam, etc.
- Workable range 0° F to 300° F

**95541:** Push-Type Grease Gun (one-handed operation).  
**95542:** 10 oz. (283.5 g) tube.

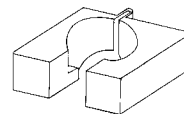


### 52296 Repair Collar

- Specially designed collar for use in vise to prevent damage to valve body housing during disassembly/assembly.



### 50971 Lock Ring Tool

- Lock Ring Tool has a 3/8 in. square socket for use with 3/8 in. drive; breaker bar, ratchet head, or torque wrenches.

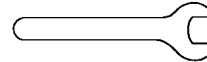

### Open-End Wrenches

- 95262** – 14 mm open-end.
- 95281** – 19 mm open-end.