

For Serial No. 9D1000 and Higher

AUTOMOTIVE

Parts Page Reorder No. APD00•10
Effective November, 2000
Supersedes APD96•05

Models:

- 10600 – Non-Vacuum
- 10601 – Vac-Ready
- 10602 – Basic Vac
- 10603 – Deluxe Vac
- 10604 – Central Vac-Ready

8" Dynorbital® Random Orbital Sander


Air Powered, Random Orbital Sander, 10,000 RPM



Always operate, inspect and maintain this tool in accordance with the Safety Code for portable air tools (ANSI B186.1) and any other applicable safety codes and regulations. Please refer to Dynabrade's Warning/Safety Operating Instructions for more complete safety information.

Index Key

No.	Part#	Description
1	11579	Spacer (4) (Ctl.-Vac Only)
2	96427	Washer (4) (Ctl.-Vac Only)
3	96424	Screw (4) (Ctl.-Vac Only)
4	57735	Shroud (Ctl.-Vac Only)
5	57371	Shroud
6	97010	Screw (9)
7	95886	Washer (13)
8	56235	Pad (Vac)
	56234	Pad (Non-Vac)
9	95898	Screw
10	95887	Set Screw
11	54628	Counter Balance
12	01678	Screw (3)
13	54627	Mounting Plate
14	56133	Bearing
15	54685	Bearing Retainer
16	01788	Screw (6)
17	01211	Lock Washer (10)
18	57368	Wiper
19	57397	Wiper Retainer
20	56046	Lock Ring
21	54672	Shaft
22	54673	Key
23	02695	Bearing
24	54630	Front Bearing Plate
25	54705	Rotor/Blade Set (5/pkg.)
26	54631	Cylinder (Incl. 95865 Pin)
27	54629	Rear Bearing Plate
28	01206	Bearing
29	95626	Retaining Ring
30	57382	Gasket (Non-Vac)
	57383	Gasket (Vac)
31	10614	Housing – 10600
	10615	Housing – 10601
	10615	Housing – 10602
	10615	Housing – 10603
	10616	Housing – 10604
32	95523	O-Ring (2)
33	56671	Handle
34	96123	Screw (2)
35	57396	Valve Stem
36	01464	Seal (2)
37	01472	Tip Valve
38	01468	Conical Spring
39	56673	Gasket
40	96328	O-Ring
41	98597	Retaining Ring
42	56672	Adapter Assembly
43	01024	O-Ring (2)
44	57343	Speed Regulator
45	54199	Muffler Seat (Non-V, Ctl.-V)
46	54195	Muffler (Non-V, Ctl.-V)
47	54194	Muffler Cap (Non-V, Ctl.-V)
48	57344	Throttle Lever
49	01017	Pin
50	96421	Flat Washer (2)
51	01494	Inlet Bushing

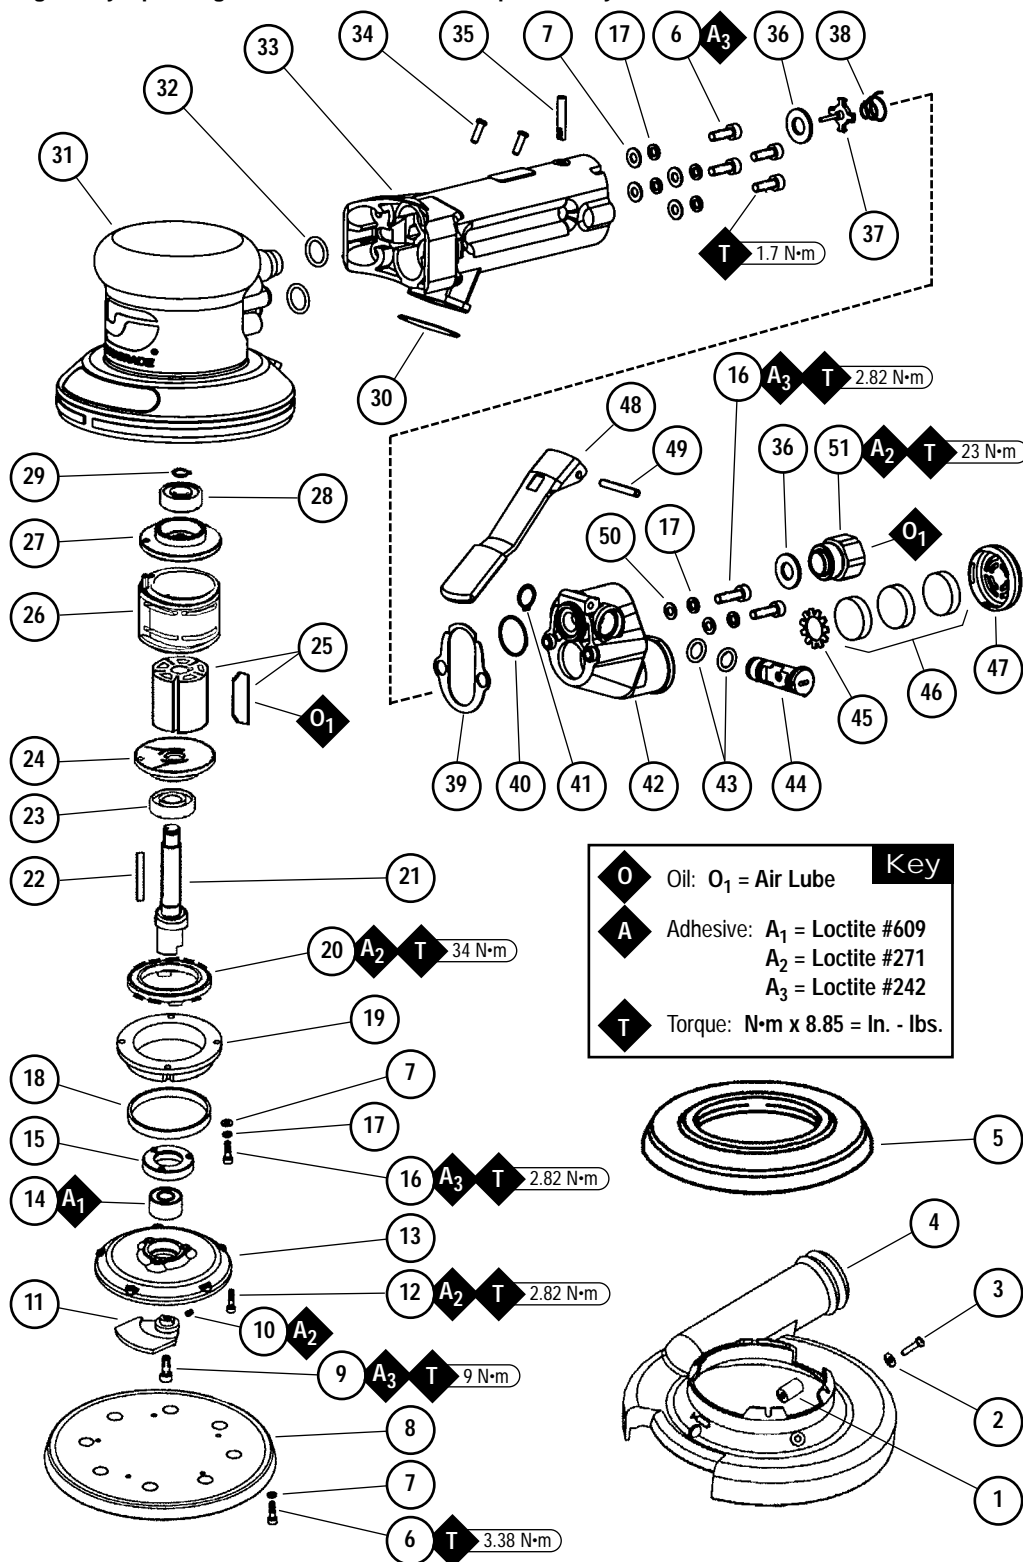

Important Operating, Maintenance and Safety Instructions

Carefully read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool.

Warning: Hand, wrist and arm injury may result from repetitive work motion and overexposure to vibration.

Important: All Dynabrade Rotary Vane air tools must be used with a Filter-Regulator-Lubricator to maintain all warranties.

Operating Instructions:

Warning: Eye, face, respiratory, sound and body protection must be worn while operating power tools. Failure to do so may result in serious injury or death. Follow safety procedures posted in workplace.

1. With power source disconnected from tool, securely fasten abrasive/accessory on tool.
2. Install air fitting into inlet bushing of tool. **Important:** Secure inlet bushing of tool with a wrench before attempting to install the air fitting to avoid damaging valve body housing.
3. Connect power source to tool. Be careful not to depress throttle lever in the process.

Maintenance Instructions:

1. Check tool speed regularly with a tachometer. If tool is operating at a higher speed than the RPM marked on the tool, the tool should be serviced to correct the cause before use.
2. Some silencers on air tools may clog with use. Clean and replace as required.
3. All Dynabrade Rotary Vane air motors should be lubricated. Dynabrade recommends one drop of air lube per minute for each 10 SCFM (example: if the tool specifications state 40 SCFM, set the drip rate of your filter-lubricator at 4 drops per minute). Dynabrade Air Lube (P/N 95842: 1pt. 473ml.) is recommended.
4. An Air Line Filter-Regulator-Lubricator must be used with this air tool to maintain all warranties. Dynabrade recommends the following: 11405 Air Line Filter-Regulator-Lubricator — Provides accurate air pressure regulation, two-stage filtration of water contaminants and micro-mist lubrication of pneumatic components. Operates 40 SCFM @ 100 PSIG has 3/8" NPT female ports.
5. Use only genuine Dynabrade replacement parts. To reorder replacement parts, specify the **Model #**, **Serial #**, and **RPM** of your machine.
6. A Motor Tune-Up Kit (P/N 96122) is available which includes assorted parts to help maintain motor in peak operating condition. Please refer to Dynabrade's Preventative Maintenance Schedule for a guide to expectant life of component parts.
7. Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons.

Safety Instructions:

Products offered by Dynabrade should not be converted or otherwise altered from original design without expressed written consent from Dynabrade, Inc.



- **Important:** User of tool is responsible for following accepted safety codes such as those published by the American National Standards Institute (ANSI).
- Always disconnect power supply before changing abrasive/accessory or making machine adjustments.
- Inspect abrasives/accessories for damage or defects prior to installation on tools.
- Please refer to Dynabrade's Warning/Safety Operating Instructions Tag (Reorder No. 95903) for more complete safety information.

Notice

All Dynabrade motors use the highest quality parts and metals available and are machined to exacting tolerances. The failure of quality pneumatic motors can most often be traced to an unclean air supply or the lack of lubrication. Air pressure easily forces dirt or water contained in the air supply into motor bearings causing early failure. It often scores the cylinder walls and the rotor blades resulting in limited efficiency and power. Our warranty obligation is contingent upon proper use of our tools and cannot apply to equipment which has been subjected to misuse such as unclean air, wet air or a lack of lubrication during the use of this tool.

Full One Year Warranty

Following the reasonable assumption that any inherent defect which might prevail in a product will become apparent to the user within one year from the date of purchase, all equipment of our manufacture is warranted against defects in workmanship and materials under normal use and service. We shall repair or replace at our factory, any equipment or part thereof which shall, within one year after delivery to the original purchaser, indicate upon our examination to have been defective. Our obligation is contingent upon proper use of Dynabrade tools in accordance with factory recommendations, instructions and safety practices. It shall not apply to equipment which has been subject to misuse, negligence, accident or tampering in any way so as to affect its normal performance. Normally wearable parts such as bearings, contact wheels, rotor blades, etc., are not covered under this warranty.

Model Number	Length Inch (mm)	Height Inch (mm)	Weight Pound (kg)	Air Flow Rate SCFM (LPM)	Sound Level	Motor Hp (W)	Motor RPM	Air Pressure PSIG (bars)
10600	12" (305)	4-1/2" (114)	3.4 lbs. (15.1)	21 (595)	80 dBA	.31 (231)	10,000	90 (6.2)
10601-10603	12" (305)	4-1/2" (114)	3.4 lbs. (15.1)	21 (595)	89 dBA	.31 (231)	10,000	90 (6.2)
10604	12" (305)	4-1/2" (114)	3.4 lbs. (15.1)	21 (595)	83 dBA	.31 (231)	10,000	90 (6.2)

Additional Specifications: Air Inlet Thread 1/4" NPT • Hose I.D. Size 3/8" (10 mm)

Motor Disassembly/Assembly Instructions

Important: Manufacturers warranty is void if tool is disassembled before warranty expires.

A complete Tune-Up Kit, part number **96122**, is available which includes assorted parts to help maintain and repair motor. These instructions are for use in conjunction with Part Number **57325** Repair Kit, which includes special tools for proper disassembly/assembly of tool.

To Disassemble:

1. Disconnect tool from power source. Invert machine and secure in soft jaw vise, or use **57092** Collar (supplied in **57325** Repair Kit).
2. Remove sanding pad with 3 mm hex wrench. (Supplied in **57325** Repair Kit)
3. Remove **54628** Counterbalance:
 - a.) Loosen **95887** Screw with 2 mm hex wrench.
 - b.) Remove **95898** Screw with 5 mm hex wrench.**Note:** **54628** Counter Balance must be held stationary while removing **95898** Screw.
- c.) Remove counterbalance.
4. Pull out mounting plate sub-assembly.
5. Disassemble mounting plate sub-assembly:
 - a.) Remove **01678** (3) Screws from underside of mounting plate with a 3 mm hex wrench.
 - b.) Press out **56133** Bearing from mounting plate by using **57091** Bearing Press Tool (supplied in **57325** Repair Kit).
6. Insert **56058** Lock Ring Wrench (supplied in **57325** Repair Kit) into corresponding tabs of lock ring and unscrew. Motor may now be lifted out for service.
7. Remove **95626** Retaining Ring. Upper motor may now be disassembled.
8. The **54629** Rear Bearing Plate contains a "press fit" bearing. Remove the rear plate assembly by securing the **54631** Cylinder in a standard 2 inch bearing separator or use a standard bearing puller gripped on the cylinder inlet and exhaust area. Push the **54672** Motor Shaft through the bearing.
9. Remove cylinder, rotor, blades and key.
10. Remove **54630** Front Plate and **02695** Front Motor Bearing, using (#2) arbor press. Support inside edge of the bearing cavity wall on the front plate while pressing on the small end of the **54672** Motor Shaft.
11. Remove **01206** Bearing from rear bearing plate with utility press pin.
12. Press **02695** Bearing from **54672** Motor Shaft.

To Reassemble:

Important: Be certain parts are clean and in good repair before reassembling.

1. Press **02695** Bearing onto **54672** Motor Shaft down to shoulder.
2. Assemble **54630** Front Bearing Plate onto shaft and press plate on outer race of **02695** Bearing.
3. Place rotor key, rotor, and blades onto shaft. **Note:** Be certain rotor "floats" easily on the shaft. Because the design of this motor uses a "floating rotor", there is no need to set or adjust gap between the rotor and end plates.
4. Place **54631** Cylinder over rotor. The "short" line-up pin goes toward the front plate.
5. Place rear bearing plate (with **01206** Rear Bearing pressed into place) over shaft and "long" end of line-up pin and press fit in place.
6. Install **95626** Retaining Ring, concave side toward motor. **Note:** Be certain retaining ring is completely pressed down into its groove on the shaft.
7. Grease the rubber seals inside the housing using a small amount of multi-purpose grease or petroleum jelly.
Note: Be certain that rubber seals in housing have not pulled out of their seat during disassembly. If this has happened re-seat the seals by pushing them until they are flush with inside diameter.
8. Secure motor housing in vise using soft jaws or **57092** Collar (Supplied in **57325** Repair Kit). Slide motor assembly into secured housing.
Note: With handle pointing toward you be certain that the line-up pin enters slot to the right of center.
9. Apply a bead of #271 Loctite® (or equivalent) onto outer edge of **56046** Lock Ring and tighten with **56058** Lock Ring Wrench to (34 N•m /300 in. – lbs.).
10. Mounting plate sub-assembly:
 - a.) Apply #609 Loctite to the inner bore of **54627** Mount plate.
 - b.) Press **56133** Bearing into, **54685** Bearing Retainer.
 - c.) Apply one drop of #271 Loctite to (3) **01678** Screws. Drop Screws thru holes in **54627** Mount Plate. Using them to line-up with threaded holes in **54658** Bearing Retainer.
 - d.) Press **54627** Mount Plate down onto **56133** Bearing and **54685** Bearing Retainer.
 - e.) Screw (3) **01678** Screws into **54685** Bearing Retainer. (Torque screws to 2.82 N•m/25 in. – lbs.)
11. Install mount plate sub-assembly onto **54672** Shaft.
12. Install **54628** Counter Balance onto **54672** Shaft, (matching profile of **54672** Shaft with profile on **54628** Counter Balance).
13. Apply one drop of #242 Loctite (or equivalent) to threads of **95898** Screw, and install screw by using a 5 mm hex key. (Torque screw to 9 N•m/80 in. – lbs.) **Note:** **54898** Counter Balance must be held stationary while installing **95898** Screw.
14. Apply a small amount of #271 Loctite (or equivalent) to threads of **95887** Set Screw and place with a 2 mm hex key.
15. Attach sanding back-up pad to the mount plate with (5) **95886** Washers and (5) **97010** Screws. (Torque screws to 3.38 N•m/30 in. – lbs.)

Installation is Complete.

To Disassemble Valve And Speed Regulator Assemblies:

1. Invert tool and place in soft jaw vise or use **57092** Repair Collar.
2. Loosen and remove **97010** Screws (2) and **01211** Lock Washers (2) from **56672** Adapter.
3. Carefully remove **56672** adapter making sure no parts fall to the ground. On non-vacuum models, pry off **54194** Muffler Cap and remove **54195** Muffler (3).
4. Remove **57343** Speed Regulator by detaching **98597** Retaining Ring with a pair of snap ring pliers. Remove **01024** O-Rings with a small screwdriver.
5. Remove tip valve assembly from housing.

(Continued on page 4)

Motor Disassembly/Assembly Instructions (continued)

To Reassemble Valve And Speed Regulator Assemblies:

1. Lightly lubricate **01024** O-Rings and slide them on **57343** Speed Regulator. Install through regulator hole on **57373** Adapter. Place **95558** Retaining Ring on groove of speed regulator using a pair of retaining ring pliers.
2. Line-up hole valve stem with inlet hole in handle. Place **01464** Seal into handle. Insert **01472** Tip Valve so that the metal pin goes through the hole in the valve stem. Place **01468** Spring into the housing, small end first.
3. Install **98597** O-Ring onto **56672** Adapter and place **56673** Gasket onto handle.
4. Gently line-up **57373** Adapter onto handle so no parts shift when tightening. Apply #242 Loctite to **01788** Screws (2), install along with **01211** Lock Washers (2) and **96421** Flat Washer (2).

Motor assembly is complete. Please allow 30 minutes for adhesives to cure before operating tool.

Important: Motor should operate at 10,000 RPM at 6.2 bar (90 PSIG). RPM should be checked with a tachometer. Before operating, we recommend that 3-4 drops of pneumatic tool oil be placed directly into the air inlet with throttle lever depressed. Operate tool for 30 seconds to determine if machine is operating properly and to allow lubricating oils to properly dispense through machine.

Loctite® is a registered trademark of the Loctite Corp.

Accessories

Self-Contained Dust Collection Systems



- 54290 "Bag-in-Box" System**
- **95361** Air Line 5' long.
 - **50682** Flex-Hose 1" dia. x 6' long.
 - **95362** Rubber Connectors (5).
 - **95575** Durable Box Receptacle.
 - Sample paper bag included. Paper bag reorder:
50692 (400/case) or
50693 (24 per package.)




- 50617, 56303 - 6' Long Flex-Hose Systems**
- 50617:** Has **50683** Standard Reusable Cloth Bag with hook 'n loop end for easy emptying.
 - 56303:** Has **56304** Zipper-Lock Bag.
 - Both systems include 6' long **50682** Flex-Hose.
 - Shown with optional **95361** Air Line (1/4").

Service Kits



- 96122 Motor Tune-Up Kit:**
- Includes assorted parts to help maintain and repair motor.

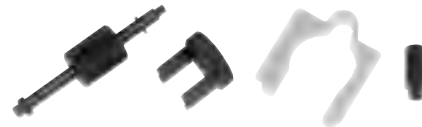

- 57325 Motor Repair Kit:**
- Contains special tools for disassembly/assembly of machine.



- 01189 Safety Lock Lever**
- A **57375** Valve Stem must be used in conjunction with this lever to function properly.



Visit our Web Site: www.dynabrade.com

Email: Customer.Service@Dynabrade.com

DYNABRADE, INC., 8989 Sheridan Drive • Clarence, NY **14031-1490** • Phone: (716) 631-0100 • Fax: 716-631-2073 • International Fax: 716-631-2524
DYNABRADE EUROPE S.à.r.l., Zone Artisanale • L-5485 Wormeldange—Haut, Luxembourg • Telephone: 352 76 84 94 1 • Fax: 352 76 84 95 1

©DYNABRADE, INC., 2000

PRINTED IN USA