

For Serial No.8F1000 and Higher

Parts Page Reorder No. PD00•69

Effective August, 2000

Supersedes PD97•25

Dynastraight

Air Motor and Machine Parts

Model:

13200 — 950 RPM, with 13071 Arbor


! WARNING

Always operate, inspect and maintain this tool in accordance with the Safety Code for portable air tools (ANSI B186.1) and any other applicable safety codes and regulations. Please refer to Dynabrade's Warning/Safety Operating Instructions for more complete safety information.

Index Key

No. Part # Description

1	13005	Mount Collar
2	53163	Handle
3	04032	Spindle Nut
4	01041	Grease Fitting (2)
5	04014	Lock Screw (2)
6	53187	Planetary Housing
7	02552	Bearing (4)
8	53191	Ring Gear (2)
9	53195	Gear
10	04026	Bearing (8)
11	53165	Planetary Carrier
12	53182	Gear Shaft (4)
13	53188	Spacer
14	53164	Planetary Carrier
15	53175	Rubber Collar
16	01007	Bearing
17	01121	Shim (3/pkg.)
18	53183	Front Bearing Plate
19	01010	Motor Spacer
20	01185	Blades (4/pkg.)
21	04009	Rotor
22	01028	Cylinder
23	50767	Pin
24	01721	Rear End Plate
25	02649	Bearing
26	30456	Housing
27	01089	Safety Throttle Lever
28	01017	Pin
29	01477	Valve Stem
30	95558	Retaining Ring
31	95730	O-Ring
32	01024	O-Ring
33	01247	Speed Reg. Assy.
34	01464	Seal
35	01472	Tip Valve
36	01468	Spring
37	01564	Air Control Ring
38	95438	O-Ring
39	95711	Retaining Ring
40	94521	Muffler Base
41	94528	Felt Muffler
42	94522	Muffler Cap
43	95375	O-Ring
44	94526	Spacer
45	94523	Inlet Adapter
46	94519	Muffler Assembly

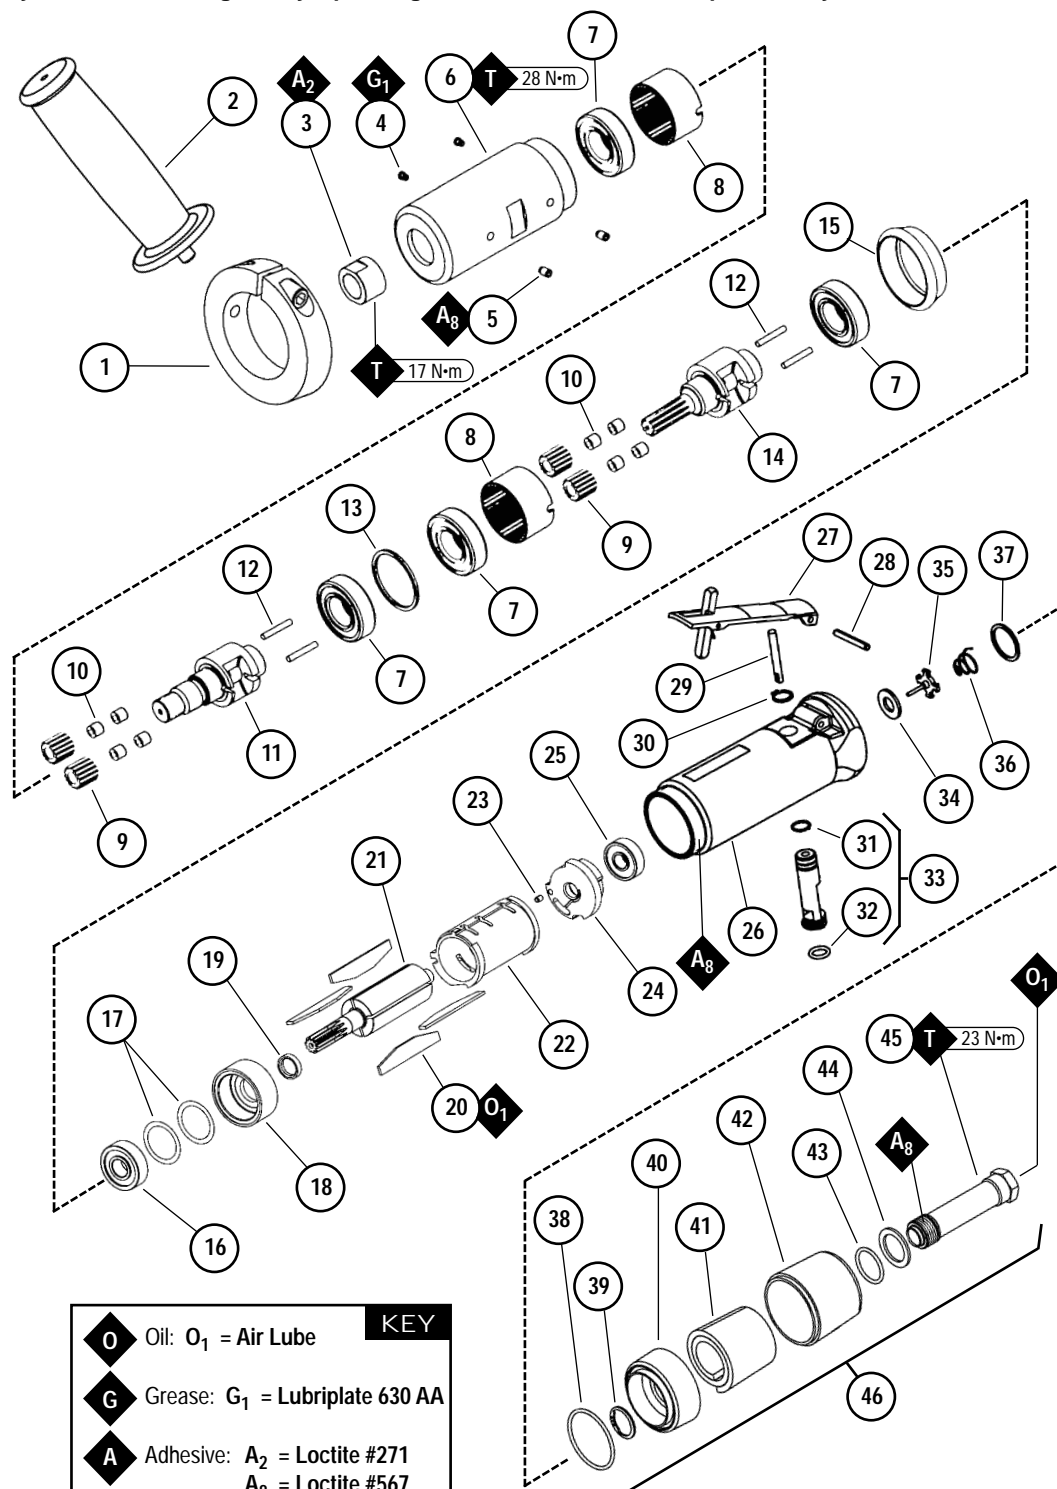

O	Oil: O_1 = Air Lube	KEY
G	Grease: G_1 = Lubriplate 630 AA	
A	Adhesive: A_2 = Loctite #271 A_8 = Loctite #567	
T	Torque: $N \cdot m \times 8.85 = \text{In.} - \text{lbs.}$	

See inside for Important Operating, Maintenance and Safety Instructions.

Important Operating, Maintenance and Safety Instructions

Carefully read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool.

Warning: Hand, wrist and arm injury may result from repetitive work motion and overexposure to vibration.

Important: All Dynabrade Rotary Vane air tools must be used with a Filter-Regulator-Lubricator to maintain all warranties.

Operating Instructions:

Warning: Eye, face, respiratory, sound and body protection must be worn while operating power tools. Failure to do so may result in serious injury or death. Follow safety procedures posted in workplace.

1. With power source disconnected from tool, securely fasten abrasive/accessory on tool.
2. Install air fitting into inlet bushing of tool. **Important:** Secure inlet bushing of tool with a wrench before attempting to install the air fitting to avoid damaging valve body housing.
3. Connect power source to tool. Be careful **not** to depress throttle lever in the process.
4. Check tool speed with tachometer. If tool is operating at a higher speed than the RPM marked on the tool or operating improperly, the tool should be serviced to correct the cause before use.

Maintenance Instructions:

1. Check tool speed regularly with a tachometer. If tool is operating at a higher speed than the RPM marked on the tool, the tool should be serviced to correct the cause before use.
2. Some silencers on air tools may clog with use. Clean and replace as required.
3. All Dynabrade Rotary Vane air motors should be lubricated. Dynabrade recommends one drop of air lube per minute for each 10 SCFM (example: if the tool specification state 40 SCFM, set the drip rate of your filter-lubricator at 4 drops per minute). Dynabrade Air Lube (P/N **95842**: 1pt. 473ml.) is recommended.
4. An Air Line Filter-Regulator-Lubricator must be used with this air tool to maintain all warranties. Dynabrade recommends the following: **11405** Air Line Filter-Regulator-Lubricator — Provides accurate air pressure regulation, two-stage filtration of water contaminants and micro-mist lubrication of pneumatic components. Operates 40 SCFM @ 100 PSIG has 3/8" NPT female ports.
5. Lubricate Planetary Gears through the gear casing fitting with 2-3 plunges for every 50 hours of use, to achieve maximum gear life (order **95542** Grease and **95541** Gun).
6. Use only genuine Dynabrade replacement parts. To reorder replacement parts, please specify the **Model #**, **Serial #** and **RPM** of your machine.
7. A Motor Tune-Up Kit (P/N **96260**) is available which includes assorted parts to help maintain motor in peak operating condition.
8. Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, keytones chlorinated hydrocarbons or nitro carbons.

Safety Instructions:

Products offered by Dynabrade should not be converted or otherwise altered from original design without expressed written consent from Dynabrade, Inc.



- **Important:** User of tool is responsible for following accepted safety codes such as those published by the American National Standards Institute (ANSI).
- Operate machine for one minute before application to workpiece to determine if machine is working properly and safely before work begins.
- Always disconnect power supply before changing abrasive/accessory or making machine adjustments.
- Inspect abrasives/accessories for damage or defects prior to installation on tools.
- Please refer to Dynabrade's Warning/Safety Operating Instructions Tag (Reorder No. **95903**) for more complete safety information.
- **Warning:** Hand, wrist and arm injury may result from repetitive work, motion and overexposure to vibration.

Notice

All Dynabrade motors use the highest quality parts and metals available and are machined to exacting tolerances. The failure of quality pneumatic motors can most often be traced to an unclean air supply or the lack of lubrication. Air pressure easily forces dirt or water contained in the air supply into motor bearings causing early failure. It often scores the cylinder walls and the rotor blades resulting in limited efficiency and power. Our warranty obligation is contingent upon proper use of our tools and cannot apply to equipment which has been subjected to misuse such as unclean air, wet air or a lack of lubrication during the use of this tool.

One Year Warranty

Following the reasonable assumption that any inherent defect which might prevail in a product will become apparent to the user within one year from the date of purchase, all equipment of our manufacture is warranted against defects in workmanship and materials under normal use and service. We shall repair or replace at our factory, any equipment or part thereof which shall, within one year after delivery to the original purchaser, indicate upon our examination to have been defective. Our obligation is contingent upon proper use of Dynabrade tools in accordance with factory recommendations, instructions and safety practices. It shall not apply to equipment which has been subject to misuse, negligence, accident or tampering in any way so as to affect its normal performance. Normally wearable parts such as bearings, contact wheels, rotor blades, etc., are not covered under this warranty.

Model Number	Motor HP (W)	Motor RPM	Wheel Arbor Dia. Inch	Sound Level	Maximum Air Flow CFM/SCFM (LPM)	Air Pressure PSIG (Bars)	Weight Pound (kg)	Length Inch (mm)	Height Inch (mm)
13200	.7 (522)	950	5/8 or 1	84 dB(A)	5/34 (957)	90 (6.2)	4.7 (2.1)	14-7/8 (378)	1-3/4 (44)

Additional Specifications: Spindle Thread 12"-20 Male • Air Inlet Thread 1/4" NPT • Hose I.D. Size 3/8" (10 mm)

Disassembly/Assembly Instructions - Dynastraight

Important: Manufacturer's warranty is void if tool is disassembled before warranty expires.

Please refer to parts breakdown for part identification.

Motor Disassembly:

1. Disconnect tool from power source. Remove any abrasives.
2. Secure air tool in padded vise. Pull back **53175** Rubber Collar.
3. With an adjustable pin wrench, remove **53187** Planetary Housing by turning counterclockwise.
4. Remove both **04014** Set Screws and pull both planetary gear assemblies from **53187** Planetary Housing.
5. Press both planetary carrier assemblies from rear **02552** Bearings. (Remove ring gear shafts and gears from **53164** and **53165** Planetary Carriers.)
6. Secure **53165** Planetary Carrier in vise and remove **04032** Spindle Nut.
7. Press carriers from front **02552** Bearings.
8. Grab onto pinion and pull motor assembly from motor housing.
9. Press **04009** Rotor from **01721** Rear Bearing Plate. Press **02649** Rear Bearing from rear bearing plate.
10. Remove cylinder and rotor blades from rotor.
11. Press **04009** Rotor through **01007** Front Bearing and **53183** Front Bearing Plate.
12. Remove **01007** Bearing and shims from **53183** Bearing Plate. Remove **01010** Spacer from rotor.

Motor Disassembly Complete.

Valve Body Disassembly:

1. Position valve body in padded vise with air inlet facing up.
2. Remove air fitting by securing **94523** Inlet Adapter with a wrench and twist air fitting from inlet adapter.
Important: **94523** Inlet Adapter must be secured before attempting to remove air fitting to avoid damaging valve body housing.
3. Remove **94523** Inlet Adapter.
4. Remove **95711** Retaining Ring from inlet adapter and separate **94521** Muffler Base from **94522** Muffler Cap. Remove **94528** Felt Muffler.
5. Remove **01564** Air Control Ring from valve body. Using needle nose pliers, remove **01468** Spring, **01472** Tip Valve and **01464** Seal.
6. Using a 2.5mm drift pin, tap **01017** Pin from housing and remove throttle lever.
7. Remove **95558** Retaining Ring. Push **01247** Regulator from valve body and remove o-rings.

Disassembly Complete.

Motor Assembly:

Important: Be sure parts are clean and in good repair before assembling. Follow all grease, oil, and torque specifications.

1. Slip **01010** Spacer onto **04009** Rotor.
2. Place a .002 shim into **53183** Bearing Plate (**Note:** **01121** Shim Pack contains .001 and .002 shims) and slip **01007** Bearing into plate.
3. Press **01007**, **53183** Bearing/Bearing Plate onto **04009** Rotor.
4. Check the clearance between rotor and bearing plate by using .001 feeler gage, clearance should be at .001 to .0015. Adjust clearance by repeating steps 2-4 with a different shim if necessary.
5. Once proper rotor/plate clearance is achieved, install well-lubricated **01185** Blades into **04009** Rotor. Dynabrade Air Lube P/N **95842** is recommended for lubrication.
6. Install **01028** Cylinder so it rests against **53183** Bearing Plate. (Make sure that the air inlet opening faces away from the **53183** Bearing Plate.)
7. Press **02649** Bearing into **01721** Rear Bearing Plate. Press these parts onto **04009** Rotor, be sure that the line-up pin and the air inlet opening line up with pin slots and air passage. **Important:** Fit must be snug between bearing plates and cylinder. If too tight, rotor will not turn free. Release, press and repress assembly so that it turns free, while still maintaining a snug fit. A loose fit will not achieve the proper preload of the motor bearing.
8. Install motor assembly into motor housing, making sure that the bearing plate node fits into the notch inside the housing.
9. Press front **02552** Bearings onto front ends of both **53164** and **53165** Planetary Carriers.
10. Apply one drop of #271 Loctite® to threads of **04032** Nut and install nut onto **53165** Planetary Carrier (torque 17.0 N•m/150 in. - lbs.).
11. Install gears with needle bearings and **53182** Gear Shafts onto planetary carriers.
12. Slip **53191** Ring Gears over planetary gears making sure that the notches will line up with the set screws and the grease fittings. Then press rear **02552** Bearings onto planetary carriers.
13. Slide first planetary gear assembly into **53187** Planetary Housing and apply install **53188** Spacer, followed by the second planetary gear assembly. A small amount of #567 Loctite® to the threads of **04014** Set Screws and install.
14. Install **53175** Rubber Collar onto **53187** Planetary Housing. Apply a small amount of #567 Loctite® to the threads of the motor housing and install **53187** Planetary Housing onto housing to secure motor (torque 28 N•m/250 in. - lbs.).

Motor Assembly Complete.

Valve Body Assembly:

1. Insert **01247** Regulator with o-rings and valve stem in place into valve body. Secure with **95558** Retaining Ring.
2. Secure valve body in padded vise with air inlet facing upwards. Insert **01464** Seal.
3. Line up hole in valve stem with hole in housing (looking past brass bushing). Insert **01472** Tip Valve so that the metal pin passes through the hole in the valve stem. Install **01468** Spring (small end towards tip valve).

(continued on next page)

Disassembly/Assembly Instructions (continued)

4. Place felt muffler into **94522** Muffler Cap. Install **94521** Muffler Base onto muffler cap.
5. Install **95438** O-Ring into groove on muffler base. Place **95375** O-Ring and **94526** Spacer into recessed area of muffler cap.
6. Slip **94523** Inlet Adapter through muffler assembly and install **95711** Retainer Ring into groove on inlet adapter.
7. Install **01564** Air Control Ring into valve body housing.
8. Apply Loctite #567 PST Pipe Sealant to threads of **94523** Inlet Adapter and install entire muffler assembly onto valve body (torque 23.0 N·m/200 in. - lbs.).
9. Replace air fitting. Secure inlet adapter with a wrench before tightening air fitting.
10. Install throttle lever and **01017** Pin.

Tool Assembly Complete. Please allow 30 minutes for adhesives to cure before operating tool.

Important: Motor should now be tested for proper operation at 90 PSIG. If motor does not operate properly or operates at a higher RPM than marked on the tool, the tool should be serviced to correct the cause before use. Before operating, place 2-3 drops of Dynabrade Air Lube (P/N **95842**) directly into air inlet with throttle lever depressed. Operate tool for 30 seconds to determine if tool is operating properly and to allow lubricating oils to properly penetrate motor.

Loctite® is a registered trademark of Loctite Corp.

Optional Accessories



95542 Grease 10 oz.

- Multi-purpose grease for all types of bearings, cams, gears.
- High film strength; excellent resistance to water, steam, etc.
- Workable range 0° F to 300° F.

95541 Push-type Grease Gun

- One-hand operation



96260 Motor Tune-Up Kit

- Includes assorted parts to help maintain and repair motor.



Dynaswivel®

Swivels 360° at two locations which allows an air hose to drop straight to the floor, no matter how the tool is held.

Note: For proper connection to a 1/4" NPT thread a reducing bushing is required.

- **95461:** 3/8" NPT



Collet Inserts

- **50013** – 1/4"
- **50014** – 3/8"
- **50016** – 6 mm
- **50039** – 8 mm
- **50065** – 1/8"



Dynabrade Air Lube

- Formulated for pneumatic equipment.
- Absorbs up to 10% of its weight in water.
- Prevents rust and formation of sludge.
- Keeps pneumatic tools operating longer with greater power and less down time.

95842: 1pt. (473 ml)

95843: 1gal. (3.8L)



50066 1/4" Collet Assembly

Visit Our Web Site: www.dynabrade.com

Email: Customer.Service@Dynabrade.com



DYNABRADE, INC., 8989 Sheridan Drive • Clarence, NY 14031-1490 • Phone: (716) 631-0100 • Fax: 716-631-2073 • International Fax: 716-631-2524
 DYNABRADE EUROPE S.à.r.l., Zone Artisanale • L-5485 Wormeldange—Haut, Luxembourg • Telephone: 352 76 84 94 1 • Fax: 352 76 84 95 1

©DYNABRADE, INC., 2003

PRINTED IN USA

PD00.69_Rev.1_05/03