

.7 hp Vacuum Die Grinder

Trimmable Shroud/Straight Line/Rear Exhaust

Air Tool Manual – Safety, Operation and Maintenance

SAVE THIS DOCUMENT, EDUCATE ALL PERSONNEL

Models:

- 56759 – 15,000 RPM**
- 1/4" & 6 mm Collet**



FIND THE MOST CURRENT OFFERING OF SUPPORT DOCUMENTS AND ACCESSORIES AT WWW.DYNABRADE.COM

⚠ WARNING

Read and understand this tool manual before operating your air tool. Follow all safety rules for the protection of operating personnel as well as adjacent areas. Always operate, inspect and maintain this tool in accordance with the American National Safety Institute (ANSI) Safety Code for Portable Air Tools – B186.1. For additional safety information, refer to Safety Requirements for the Use, Care and Protection of Abrasive Wheels – ANSI B7.1, Code of Federal Regulation – CFR 29 Part 1910, European Committee for Standards (EN) Hand Held Non-Electric Power Tools – Safety Requirements and applicable State and Local Regulations.

SAFETY LEGEND

	⚠ WARNING Read and understand tool manual before work starts to reduce risk of injury to operator, visitors, and tool.	⚠ WARNING Practice safety requirements. Work alert, have proper attire, and do not operate tools under the influence of alcohol or drugs.	
	⚠ WARNING Eye protection must be worn at all times, eye protection to conform to ANSI Z87.1.	⚠ WARNING Ear protection to be worn when exposure to sound, exceeds the limits of applicable Federal, State or local statutes, ordinances and/or regulations.	
	⚠ WARNING Respiratory protection to be used when exposed to contaminants that exceed the applicable threshold limit values required by law.	⚠ WARNING Air line hazard, pressurized supply lines and flexible hoses can cause serious injury. Do not use damaged, frayed or deteriorated air hoses and fittings.	

⚠ WARNING

Some dust created by sanding, grinding, drilling, and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks and cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

SAFETY INSTRUCTIONS

Carefully Read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool. Products offered by Dynabrade are not to be modified, converted or otherwise altered from the original design without expressed written consent from Dynabrade, Inc.

Tool Intent: .7 hp Vacuum Die Grinder is ideal for deburring, deflashing, surface preparation, cleaning and finishing using the proper abrasive stones, abrasive mounted wheels and points, molded abrasives, and carbide burrs. An appropriate external vacuum source is required that is suitable for material being processed.

Do Not use tool for anything other than its intended applications.

This power tool is not intended for use in potentially explosive atmospheres and is not insulated against contact with electrical power.

Training: Proper care, maintenance, and storage of your air tools will maximize their performance.

- Employer's Responsibility – Provide .7 hp Vacuum Die Grinder operators with safety instructions and training for safe use of tools and accessories.

(continued on next page)

SAFETY INSTRUCTIONS (Continued)

Accessory Selection:

- Abrasive/accessory RPM (speed) rating MUST be approved for AT LEAST the tool RPM rating.
- Before mounting an accessory, visually inspect for defects. Do not use defective accessories.
- Use only accessories of the correct shaft size for the collet (example: 1/4" shaft = 1/4" collet).
- Use only recommended accessories. Reference Dynabrade catalog and this tool manual.
- Follow tool specifications before choosing size and type of accessory.
- Only use recommended fittings and air line sizes. Air supply hoses and air hose accessories must have a minimum working pressure of 150 PSIG (10 Bars) or 150 percent of the maximum pressure produced in the system, whichever is higher. (See tool Machine Specifications table.)

OPERATING INSTRUCTIONS

Warning: Always wear personal protective equipment. Operator of tool is responsible for following: accepted eye, face, respiratory, hearing and body protection.

Caution: Hand, wrist and arm injury may result from repetitive work, motion and overexposure to vibration.

- Keep hand and clothing away from working end of the air tool.
- Working end of tool has a potential of cutting and severing.


Operation: Be sure that any loose clothing, hair and all jewelry is properly restrained.

- Secure inlet bushing on air tool with a wrench before attempting to install the air fitting to avoid damaging housing assembly.
- BEFORE MOUNTING AN ACCESSORY, after all tool repairs and whenever a .7hp Vacuum Die Grinder is issued for use, check tool RPM (speed) with tachometer with air pressure set at 90 PSIG while the tool is running. If tool is operating at a higher speed than the RPM marked on the tool housing, or operating improperly, the tool must be serviced and corrected before use.
- Before mounting an accessory regularly clean and inspect collet assembly parts for wear or damage. Do Not use worn or damaged components.

Caution: Tool RPM must never exceed abrasive/accessory RPM rating. Check accessory manufacturer for details on maximum operating speed or special mounting instructions. Improper mounting of an accessory may cause excessive vibration levels or damage the accessory. Make sure no one is in the unguarded plane of the accessory. Run tool for 1 minute of operating speed in a protected area.

PROPER MOUNTING PROCEDURE

Warning: With Power Source Disconnected from the Tool, Remove Shroud Assembly by Loosening Clamp. Remove/Mount Correctly Rated Accessory. Replace Shroud Assembly and Tighten Clamp.

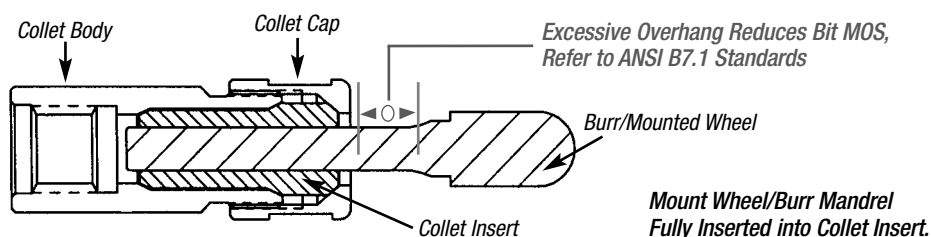

- Connect air tool to power source. Be careful NOT to depress throttle lever in the process. **Do not expose air tool to inlet pressure above 90 PSIG or (6.2 Bars).**

Caution: After installing the accessory, before testing or use and/or after assembling tool, the .7 hp Vacuum Die Grinder must be started at a reduced speed to check for good balance. Gradually increase tool speed. DO NOT USE if tool vibration is excessive. Correct cause, and retest to insure safe operation. Test tool at its free speed (RPM) in a protected area for at least one minute before applying the tool to the work.


- Release throttle lever when air supply is interrupted.
- Make sure that work area is uncluttered, and visitors are at a safe range from the tools and debris.
- Air tools are not intended for use in explosive atmospheres and are not insulated for contact with electric power sources.
- Use a vise or clamping device to hold work piece firmly in place.
- Do not apply excessive force on tool or apply "rough" treatment to it.
- Always work with a firm footing, posture and proper lighting.
- Ensure that sparks and debris resulting from work does not create a hazard.
- This tool is rear exhaust. Tool exhaust may contain lubricants, vane material, bearing grease, and other materials flushed thru the tool.

Warning: Grinding certain materials can create explosive dust. It is the employers responsibility to notify the user of acceptable dust levels.

- Grinding can cause sparks which can cause fires or explosions. It is the users responsibility to make sure the work area is free of flammable materials.
- DO NOT USE cut-off wheels or router bits on this tool.
- Always use dust extraction or suppression systems and personal protective equipment which are suitable for the materials being processed.
- Trimming shroud: vacuum shroud sleeve may be cut/trimmed or removed to suit application.

Report to your supervisor any condition of the tool, accessories, or operation you consider unsafe.

Air System

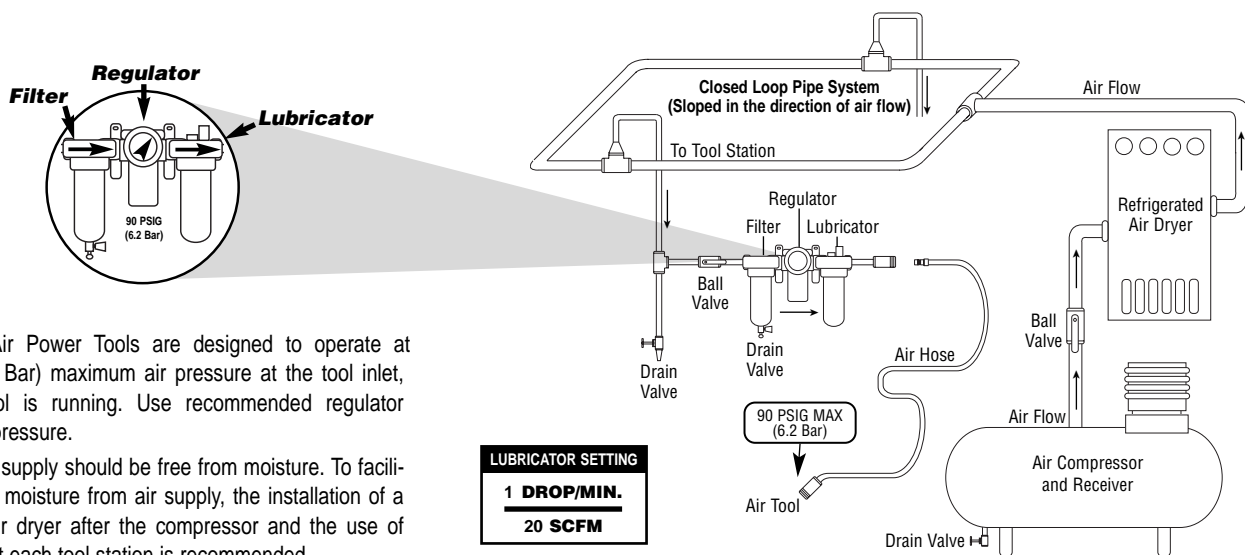

- Dynabrade Air Power Tools are designed to operate at 90 PSIG (6.2 Bar) maximum air pressure at the tool inlet, when the tool is running. Use recommended regulator to control air pressure.
- Ideally the air supply should be free from moisture. To facilitate removing moisture from air supply, the installation of a refrigerated air dryer after the compressor and the use of drain valves at each tool station is recommended.

Maintenance Instructions

Important: To keep tool safe a Preventative Maintenance Program is recommended whenever portable power tools are used. The program should include inspection of air supply lines, air line pressure, proper lubrication and repair of tools. Refer to ANSI B186.1 for additional maintenance information.

- Use only genuine Dynabrade replacement parts to ensure quality. To order replacement parts, specify **Model#**, **Serial#** and **RPM** of your air tool.
- It is strongly recommended that all Dynabrade rotary vane air tools be used with a Filter-Regulator-Lubricator to minimize the possibility of misuse due to unclean air, wet air or insufficient lubrication. Dynabrade recommends the following: **10681** Air Line Filter-Regulator-Lubricator — Provides accurate air pressure regulation, two-stage filtration of water contaminants and micro-mist lubrication of pneumatic components. Delivers up to 55 SCFM/1,558 LPM @ 145 PSIG/9.7 Bar (Max. Air Temperature of 140°F/60° C) **Note:** Two (2) 3/8" NPT Reducer Bushings are included.
- Dynabrade recommends one drop of air lube per minute for each 20 SCFM (example: if the tool specification states 40 SCFM, set the drip rate on the filter-lubricator to 2 drops per minute). Dynabrade Air Lube (P/N **95842**: 1 pt 473 ml) is recommended.

Routine Preventative Maintenance:

- Check free speed of tool regularly using a tachometer without the accessory mounted. After all tool repairs and whenever a .7 hp Vacuum Die Grinder is issued for use, check tool RPM (speed) with tachometer with air pressure set at 90 PSIG while the tool is running. If tool is operating at a higher speed than the RPM marked on the tool housing, operating improperly or demonstrates unusual vibration, the tool must be serviced and corrected before use.
- Inspect accessories before mounting. Do not mount accessories that are damaged or nicked.
- Check accessory - speed rating. Rating on accessory must be greater than the tool speed marked on the housing.
- If accessory breakage occurs, investigate to determine the cause and correct before issuing tool for work.
- Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons.
- **DO NOT** clean or maintain tools with chemicals that have a low flash point (example: WD-40®).
- Motor Tune-Up Kits (P/N **96529**, see back page) are available, they includes high wear and medium wear motor parts.
- Air tool markings must be kept legible at all times, if not, reorder housing and replace. User is responsible for maintaining specification information i.e.: Model #, S/N, and RPM. (See Assembly Breakdown)
- Blow air supply hose out prior to initial use.
- Visually inspect air hoses and fittings for frays, visible damage and signs of deterioration. Replace damaged or worn components.
- Refer to Dynabrade's Warning/Safety Operating Instructions Tag (Reorder No. **95903**) for safety information.


After maintenance is performed on tool, add a few drops of Dynabrade Air Lube (P/N **95842**) to the air line and start the tool a few times to lubricate air motor. Check for tool vibration before mounting accessory.

Handling and Storage:

- Use of tool rests, hangers and/or balancers is recommended.
- Protect tool inlet from debris (see Notice on Page 6).
- **DO NOT** carry tool by air hose or near the tool throttle lever.
- Protect tool from exposure to water, solvents, high humidity, freezing temperature and extreme temperature changes.
- **DO NOT USE** accessories that have been dropped or show signs of cracks, nicks or other defects.
- Store accessories in protective racks or compartments to prevent damage.

.7 hp Vacuum Die Grinder Complete Assembly Diagram

Index Key		
No.	Part #	Description
1	02288	Vacuum Shroud Sleeve
2	02287	Vacuum Shroud Base
3	97029	Hose Clamp
4	02240	Rear Exhaust Cover
5	53175	Insulator Collar
6	01796	Block Plate
7	50012	Collet Cap
8	50013	Collet Insert - 1/4"
	50016	Collet Insert - 6 mm
9	50011	Collet Body
10	01708	Rotor Nut
11	01007	Bearing
12	01121	Shim pack (3/pkg.)
13	01008	Front Bearing Plate
14	50767	Roll Pin (2)
15	01010	Spacer
16	01185	Vane (4/pkg.)
17	55025	Rotor
18	01028	Cylinder
19	01721	Rear Bearing Plate
20	02649	Bearing
21	01017	Pin
22	01089	Safety Throttle Lever
23	01477	Valve Stem
24	95558	Retaining Ring
25	06056	Housing
26	95730	O-Ring
27	01024	O-Ring
28	01247	Speed Regulator Assy.
29	01464	Seal
30	01472	Tip Valve
31	01468	Spring
32	01643	Air Control Ring
33	97161	Vacuum Hose Retainer
34	31907	Swivel Cuff - 1-1/4" I.D.
35	97180	Hose Cuff
36	31942	Hose
37	95711	Retaining Ring
38	95438	O-Ring
39	94521	Muffler Base
40	94524	Sintered Muffler
41	94525	Felt Muffler
42	94522	Muffler Cap
43	95375	O-Ring
44	94526	Spacer
45	94523	Inlet Adapter
46	94520	Muffler Assembly

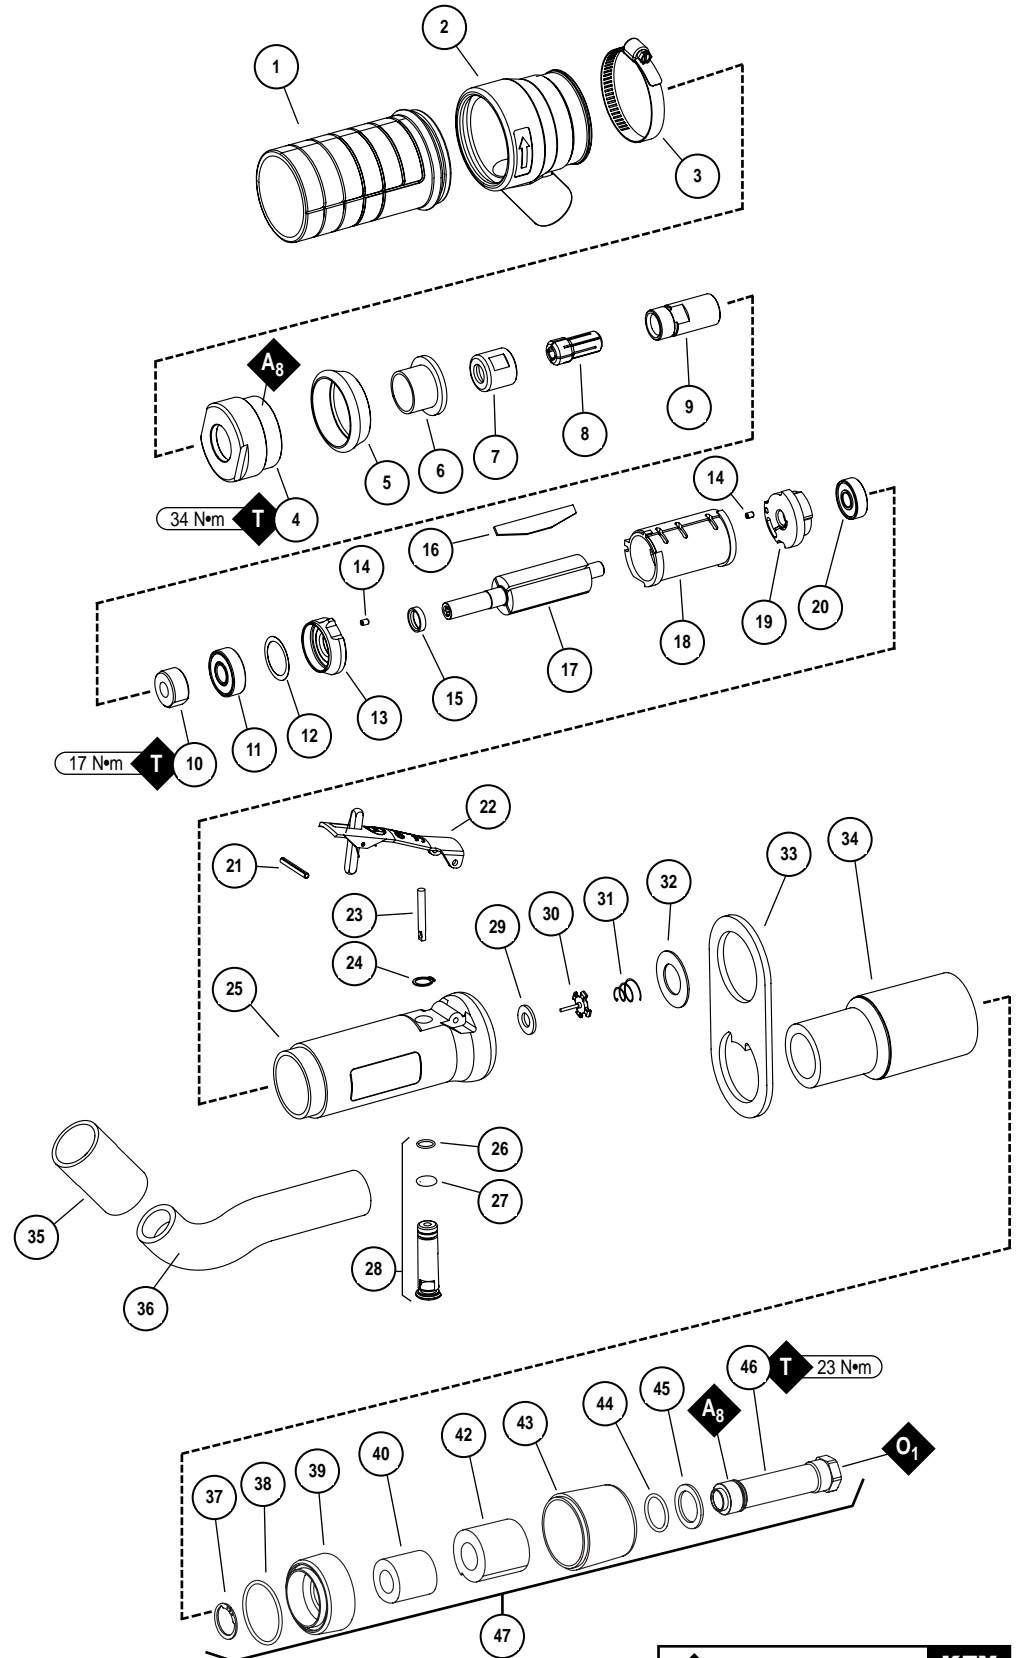

95262 - 14mm open-end
95281 - 19mm open-end

KEY	
O	Oil: O ₁ = Air Lube
A	Adhesive: A ₈ = Loctite #567
T	Torque: N•m x 8.85 = In. - lbs.

Disassembly/Assembly Instructions – .7 hp Rear Exhaust

Important: The Dynabrade Pneumatic Power Tool Lifetime Warranty Policy does NOT cover normally wearable parts and products. Before servicing this tool please contact Dynabrade Inc. or a Dynabrade Subsidiary for information regarding the Dynabrade Pneumatic Power Tool Lifetime Warranty Policy. Notice: Special repair tooling referred to in these instructions can be ordered from Dynabrade. (See Page 8)

Disconnect the die grinder from the air supply.

Motor Disassembly:

1. Secure the flats of the motor housing in a vise with aluminum or bronze jaws with the collet pointing up.
2. Loosen the clamp and remove the shroud.
3. Loosen the collet cap and remove the insert tool, cap and insert.
4. Use a 1½" (38 mm) or an adjustable wrench to remove the rear exhaust cover. Turn it counterclockwise.
5. Remove the air motor.
6. Fasten the **96346** Bearing Separator (2") around the portion of the **01028** Cylinder that is closest to the **01721** Rear Bearing Plate. Place the bearing separator and the motor in the **96232** Arbor Press (#2) with the rotor shaft pointing down.
7. Use a 5/32" diameter flat end drive punch as a press tool to push the rotor out of the **02649** Bearing.
8. Remove the cylinder and vanes.
9. Use the **96213** Bearing Removal Tool and the arbor press to remove the **02649** Bearing from the **01721** Rear Bearing Plate.
10. Secure the body of the rotor in a vise with aluminum or bronze jaws, and remove the **01708** Rotor Nut from the **55025** Rotor. Remove the collet body. Turn counterclockwise.
11. Remove the **01008** Front Bearing Plate, **01007** Bearing, shims, **01010** Spacer.

Motor Disassembly Complete.

Valve and Muffler Disassembly:

1. Secure the flats of the motor housing in a vise with aluminum or bronze jaws with the **94523** Inlet Adapter pointing up.
2. Use a wrench to hold the inlet adapter stationary when removing the air fitting.
3. Remove the **94523** Inlet Adapter. Turn it counterclockwise.
4. Use the exploded view of the **94520** Muffler in this tool manual for the order of disassembly and part number identification. Be careful; do not lose the air control ring.
5. Use needle nose pliers to remove the **01468** Spring and the **01472** Tip Valve. Use a small screwdriver to remove the **01464** Seal.
6. Position the valve housing so that the **01017** Pin, **01089** Safety Throttle Lever, and **01477** Valve Stem can be removed.
7. Use retaining ring pliers to remove the **95558** Retaining Ring and then push the **01247** Speed Regulator Assembly out of the motor housing.

Valve Disassembly Complete.

Clean and inspect all parts before assembling.

Valve Assembly:

1. Install the **01247** Speed Regulator Assembly (with o-rings) into the valve housing and secure it in place with the **95558** Retaining Ring.
2. Secure the flats of the motor housing in a vise with aluminum or bronze jaws so that the **01017** Pin, **01089** Safety Throttle Lever, and **01477** Valve Stem can be installed. Install these parts.
3. Secure the flats of the motor housing in a vise with aluminum or bronze jaws with the air inlet opening pointing up.
4. Install the **01464** Seal into the valve housing so that it is laying flat.
5. Use needle nose pliers to install the **01472** Tip Valve so that the metal pin passes through the hole in the **01477** Valve Stem.
6. Install the **01468** Spring so that the smaller end of the spring fits against the back of the tip valve.
7. Install the air control ring against the back of the valve housing.
8. Apply a small amount of the Loctite #567 (or equivalent) to the external threads of the **94523** Inlet Adapter and install it into the valve housing. (Torque to 23 N•m/200 in. lbs.)
9. Hold the inlet adapter stationary with a wrench when installing the air fitting.

Valve Assembly Complete.

Motor Assembly:

1. Secure the body of the rotor in a vise with aluminum or bronze jaws and install the **01010** Spacer onto the rotor.
2. Select .003" (.08 mm) shim thickness from the **01121** Shim Pack and install these into the **01008** Front Bearing Plate.
3. Install the **01708** Rotor Nut onto the **55025** Rotor. (Torque to 17 N•m/150 in. lbs.)
4. Install the **50011** Collet Body onto the rotor.
5. Use a .001" (0.3 mm) thick feeler gauge to check the clearance between the bearing plate and the face of the rotor.
6. Clearance should be .001"-.0015" (0.3-0.4 mm). Note: If the clearance needs adjustment, repeat steps 2-5. Add or remove shims as required.
7. Lubricate the **01085** Vanes with the **95842** Dynabrade Air Lube 10W/NR (or equivalent). Install vanes into the rotor.
8. Install the **01028** Cylinder so that the air inlet opening will align with the air inlet opening in the **01721** Rear Bearing Plate.
9. Use the RAISED OUTSIDE DIAMETER of the **96240** Bearing Press Tool and the arbor press to install the **02649** Bearing into the **01721** Rear Bearing Plate.

(continued on next page)

Disassembly/Assembly Instructions – .7 hp Rear Exhaust (cont.)

10. Use the RAISED CENTER of the **96240** Bearing Press Tool and the arbor press to install the bearing/plate onto the rotor.
11. Carefully press the bearing/plate down until it just touches the cylinder. This will establish a snug fit between the bearing plates and the cylinder.
12. Carefully align the air passage of the motor with air passage in the housing. Slide the motor into the housing.
13. Install the **01796** Block Plate and **53175** Insulator Collar into the **02240** Rear Exhaust Cover.
14. Apply a small amount of Loctite #567 (or equivalent) to the threads of the rear exhaust cover and install it onto the housing.
(Torque to 34 N•m/300 in. lbs.)
15. Install the shroud and secure it with the clamp.

Motor Assembly Complete. Tool Assembly Complete.

Important: Motor should now be tested for proper operation at 90 PSIG. If motor does not operate properly or operates at a higher RPM than marked on the tool, the tool should be serviced to correct the cause before use. Before operating, place 2-3 drops of Dynabrade Air Lube (P/N **95842**) directly into air inlet with throttle lever depressed. Operate tool for 30 seconds to determine if tool is operating properly and to allow lubricating oils to properly penetrate motor.

Loctite® is a registered trademark of Loctite Corp.

Lifetime Warranty

All Dynabrade portable pneumatic power tools are rigorously inspected and performance tested in our factory before shipping to our customers. If a Dynabrade tool develops a performance problem and an inherent defect is found during normal use and service, Dynabrade will warrant this tool against defects in workmanship and materials for the lifetime of the tool. Upon examination and review at our factory, Dynabrade shall confirm that the tool qualifies for warranty status, and will repair or replace the tool at no charge to the customer. Normally wearable parts and products are NOT covered under this warranty. Uncovered items include bearings, contact wheels, rotor blades, regulators, valve stems, levers, shrouds, guards, O-rings, seals, gaskets and other wearable parts. Dynabrade's warranty policy is contingent upon proper use of our tools in accordance with factory recommendations, instructions and safety practices. It shall not apply to equipment that has been subjected to misuse, negligence, accident or tampering in any way so as to affect its normal performance. To activate lifetime warranty, customer must register each tool at www.dynabrade.com. Dynabrade will not honor lifetime warranty on unregistered tools. A one-year warranty will be honored on all unregistered portable pneumatic power tools. Lifetime warranty applies only to portable pneumatic tools manufactured by Dynabrade, Inc. in the USA. Lifetime warranty applies only to the original tool owner; warranty is non-transferable.

Notice

All Dynabrade motors use the highest quality parts and metals available and are machined to exacting tolerances. The failure of quality pneumatic motors can most often be traced to an unclean air supply or the lack of lubrication. Air pressure easily forces dirt or water contained in the air supply into motor bearings causing early failure. It often scores the cylinder walls and the rotor blades resulting in limited efficiency and power. Our warranty obligation is contingent upon proper use of our tools and cannot apply to equipment which has been subjected to misuse such as unclean air, wet air or a lack of lubrication during the use of this tool.

Machine Specifications

Model Number	Motor hp (W)	Motor RPM	Sound Level	Maximum Air Flow SCFM (LPM)	Collet Insert Size	Air Pressure PSIG (Bars)	Weight Pound (kg)	Length Inch (mm)	Height Inch (mm)
56759	.7 (433)	15,000	81 dB(A)	35 (850)	1/4" or 6 mm	90 (6.2)	2.6 (1.6)	13.9 (353)	4.6 (118)

Additional Specifications: Air Inlet Thread 1/4" NPT • Hose Size 3/8" or 10 mm

Sound Level is the pressure measurement according to the method outlined in ISO regulation ISO-15744.

Preventative Maintenance Schedule

For All .7hp Vacuum Die Grinder

This service chart is published as a guide to expectant life of component parts. The replacement levels are based on average tool usage over one year. Dynabrade Inc. considers one year usage to be 1,000 hours.

Parts Common to all Models:

LEGEND	
T	Part included in Tune-Up Kit
X	Type of wear, no other comments apply.
L	Easily lost. Care during assembly/disassembly.
D	Easily damaged during assembly/disassembly.
R1	Replace each time tool is disassembled.



96529 – Tune-Up Kit

Index #	Part Number	Description	Number Required	High Wear 100%	Medium Wear 70%	Low Wear 30%	Non-Wear 10%
1	02288	Vacuum Shroud Sleeve	1				X
2	02287	Vacuum Shroud Base	1				X
3	97029	Hose Clamp	1				X
4	02240	Rear Exhaust Cover	1				X
5	53175	Insulator Collar	1			X	
6	01796	Black Plate	1				X
7	50012	Collet Cap	1			X	
8	See Note	Collet Insert	1			X	
9	50011	Collet Body	1				X
10	01708	Rotor Nut	1				X
11	01007	Bearing	1		T		
12	01121	Shim Pack (3/pkg.)	1		T		
13	01008	Front Bearing Plate	1			X	
14	50767	Roll Pin	2				X
15	01010	Spacer	1			X	
16	01185	Vane (4/pkg.)	1	T			
17	55025	Rotor	1				X
18	01028	Cylinder	1			X	
19	01721	Rear Bearing Plate	1				X
20	02649	Bearing	1		T		
21	01017	Pin	1			T	
22	01089	Safety Throttle Lever	1				X
23	01477	Valve Stem	1		T		
24	95558	Retaining Ring	1		T		
25	See Note	Housing Assembly	1				X
26	95730	O-Ring	1			X	
27	01024	O-Ring	1			X	
28	01247	Speed Regulator Assy.	1			T	
29	01464	Seal	1			T	
30	01472	Tip Valve	1			T	
31	01468	Spring	1			T	
32	01643	Air Control Ring	1				X
33	97161	Vacuum Hose Retainer	1				X
34	31907	Swivel Cuff - 1-1/4" I.D.	1				X
35	97180	Hose Cuff	1				X
36	31942	Hose	1				X
37	95711	Retaining Ring	1			T	
38	95438	O-Ring	1			T	
39	94521	Muffler Base	1				X
40	94524	Sintered Muffler	1			T	
41	94525	Felt Muffler	1			T	
42	94522	Muffler Cap	1				X
43	95375	O-Ring	1			T	
44	94526	Spacer	1				X
45	94523	Inlet Adapter	1				X
46	94520	Muffler Assembly	1				X

Note: Please refer to page 4 of tool manual for specific part number.

Optional Accessories

FIND THE MOST CURRENT OFFERING OF SUPPORT DOCUMENTS AND ACCESSORIES AT WWW.DYNABRADE.COM



Composite Dynaswivel®

- Swivels 360° AT TWO PIVOT POINTS allowing the air hose to drop directly to the floor while providing superb tool handling.
- 94300** – 1/4" NPT.



96529 Motor Tune-Up Kit

- Includes assorted parts to help maintain and repair motor.

01713 Drop-In Motor

- Allows quick and easy replacement. No motor adjustments needed.



Dynabrade Air Lube

- Formulated for pneumatic equipment.
- Absorbs up to 10% of its weight in water.
- Prevents rust and formation of sludge.
- Keeps pneumatic tools operating longer with greater power and less down time.

95821: 4 oz. (108 ml)

95842: 1 pt. (473 ml)

95843: 1 gal. (3.8 L)



Carbide Burr Kits

- Includes 12 burs for grinding, deburring and finishing metal.

93350 – 1/4" Kit



95675 Male Plug

- Provides up to twice the air flow compared to standard plug design.
- Plug has "ported" design to prevent "starving" of the air tool.



Collet Inserts

- **50065** – 1/8"
- **50013** – 1/4"
- **50014** – 3/8"
- **50016** – 6mm
- **50039** – 8mm



Portable Vacuum Systems

- Dynabrade offers a wide assortment of vacuuming options to choose from. To help make your selection please request the most current portable vacuum systems literature from your local representative or by searching our web site.

Reference Contact Information

1. American National Standards Institute – ANSI

25 West 43rd Street
Forth Floor
New York, NY **10036**
Tel: 1 (212) 642-4900
Fax: 1 (212) 398-0023

2. Government Printing Office – GPO

Superintendent of Documents
Attn. New Orders
P.O. Box **371954**
Pittsburgh, PA **15250-7954**
Tel: 1 (202) 512-1803

3. European Committee for Standardization

Rue de Stassart 36
B - 1050 Brussels, Belgium

Visit Our Web Site: www.dynabrade.com

Email: Customer.Service@Dynabrade.com



DYNABRADE, INC., 8989 Sheridan Drive • Clarence, NY **14031-1419** • Phone: (716) 631-0100 • Fax: 716-631-2073 • International Fax: 716-631-2524
DYNABRADE EUROPE S.à.r.l., Zone Artisanale • L-5485 Wormeldange—Haut, Luxembourg • Telephone: 352 76 84 94 1 • Fax: 352 76 84 95 1

©DYNABRADE, INC., 2009

PRINTED IN USA

PD09.51_10/09